

OCB-24 shown



OCB-(24,34) series

**FOR USE WITH
NATURAL GAS ONLY**

ROUND OUTDOOR CAMPFIRE CONTROL SYSTEM

WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

WHAT TO DO IF YOU SMELL GAS:

- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in your building.
- Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
- If you cannot reach your gas supplier, call the fire department.

Installation and service must be performed by an NFI Certified or other qualified professional installer, service agency, or gas supplier.

WARNING: For Outdoor Use Only



INSTALLER & CONSUMER: These instructions MUST be retained with this appliance for future reference.

Important: Read these instructions carefully before starting installation of the unit.

WARNING

Improper installation, adjustment, alteration, service, or maintenance can cause property damage, personal injury, or loss of life. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

This appliance is designed as an **attended appliance**. Adults **must** be present when the unit is operating. **DO NOT** leave this unit burning when unattended. If this product is left burning unattended, it may cause damage or serious injury.

IMPORTANT

For safe operation and proper performance of this product and to comply with certification, listings, and building code acceptances, use **ONLY** Peterson Real-Fyre® controls, parts, and accessories that have been specifically listed or certified for use with this burner system. Use of other controls, parts, or accessories is prohibited and will void all warranties, certifications, listings, and building code approvals, and may cause property damage, personal injury, and loss of life.

CODE AND SUPPLY REQUIREMENTS:

The installation must conform with local codes and ordinances, or, in the absence of local codes, with the latest *National Fuel Gas Code, ANSI Z223.1*.

OCB-24 Séries Montrées



OCB-(24,34) séries

POUR L'USAGE AVEC GAZ
NATUREL SEULEMENT

SYSTÈME DE CONTRÔLE EXTÉRIEUR ROND DE CAMPFIRE

AVERTISSEMENT: Si l'information en ce manuel n'est pas suivie exactement, une incendie ou une explosion peut résulter entraînant des dégâts matériels, le dommage corporel ou des pertes humaines.

- Ne stockez pas ou n'employez l'essence ou d'autres vapeurs et liquides inflammables à proximité de ceci ou d'aucun autre appareil.

CE QUI À FAIRE SI VOUS SENTEZ LE GAZ:

- N'essayez pas de n'allumer aucun appareil.
- Ne touchez aucun commutateur électrique ; ne font pas nous aucun téléphone dans votre bâtiment.
- Appelez immédiatement votre fournisseur de gaz d'un neighbor'; téléphone de s. Suivez le gaz supplier'; instructions.
- Si vous ne pouvez pas atteindre votre fournisseur de gaz, appelez les corps de sapeurs-pompiers.

L'installation et le service doivent être assurés par un NFI certifié ou toute autre installateur, agence de service, ou fournisseur professionnelle qualifiée de gaz.

AVERTISSEMENT: Pour l'usage extérieur seulement



d'INSTALLATEUR; CONSOMMATEUR: Ces instructions DOIVENT être maintenues avec cet appareil pour la future référence.

Important: Lisez ces instructions soigneusement avant de commencer l'installation de l'unité.

AVERTISSEMENT

L'installation, l'ajustement, le changement, le service, ou l'entretien inexact peuvent causer des dégâts matériels, le dommage corporel, ou des pertes humaines. Lisez l'installation, l'opération et les instructions d'entretien complètement avant d'installer ou entretenir cet équipement.

Cet appareil est conçu comme appareil occupé. Les adultes doivent être présent quand l'unité fonctionne. Ne laissez pas ce burning d'unité si sans surveillance. Si ce produit est laissé sans surveillance brûlant, il peut causer des dommages ou des dommages sérieux.

IMPORTANT

Pour l'exploitation sûre et l'exécution appropriée de ce produit et pour se conformer à la certification, aux listes, et aux acceptations de codes du bâtiment, commandes, pièces, et accessoires de Peterson d'utilisation SEULEMENT Vrais-Fyre® qui ont été spécifiquement énumérés ou certifiés pour l'usage avec ce système de brûleur. L'utilisation d'autres commandes, pièces, ou accessoires est interdite et videra toutes les garanties, certifications, listes, et approbations de codes du bâtiment, et peut causer des dégâts matériels, le dommage corporel, et des pertes humaines.

CONDITIONS DE CODE ET D'APPROVISIONNEMENT:

L'installation doit se conformer aux codes locaux et aux ordonnances, ou, en l'absence des codes locaux, au plus défunt code national de gaz de carburant, la norme ANSI Z223.1.

TABLE OF CONTENTS

4	PARTS LIST
5	PRE-INSTALLATION AND PREPARATION SAFETY GUIDELINES
6	INSTALLATION SAFETY GUIDELINES
6	OPERATING THE UNIT SAFELY AND CORRECTLY
7	IMPORTANT SAFETY INFORMATION
7	MINIMUM CLEARANCE TO COMBUSTIBLES
7	INSTALLATION
8	OCB-34 INSTALLATION SPECIFICATIONS
9	OCB-24 INSTALLATION SPECIFICATIONS
10	CONNECT TO THE GAS SUPPLY
10	LEAK TEST
11	DECORATIVE MEDIA OPTIONS
11	OPTIONAL CAMPFYRE LOGS
13	OPTIONAL BEACHWOOD LOGS AND/OR VOLCANIC STONE
15	OPTIONAL GLASS/GEMS OR RIVER ROCK ON GLASS/GEMS
16	NOTES PAGE
17	MANUAL (MATCH) LIGHTING INSTRUCTIONS
19	OPERATION
19	CLEANING & MAINTENANCE
20	PETERSON CAMPFYRE LIMITED WARRANTY

PARTS LIST


OCB-34

Match lit manual
(Natural Only)

NO. DESCRIPTION

1. Burner pan assy
2. Key valve assembly
3. Flex connector (2)
4. Lava granules (10 lbs)
& lava coals (6 lbs)

Fig. 4-1

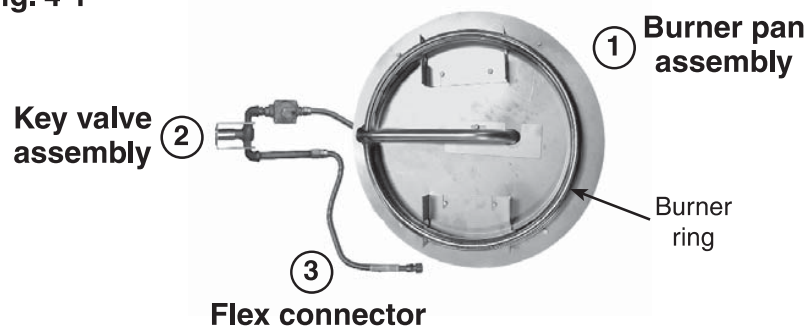

② Key Valve front view



Fig. 4-7

④ Lava granules & coals

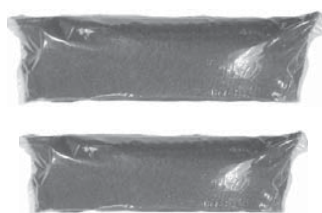


Fig. 4-9


OCB-24

Match lit manual
(Natural only)

NO. DESCRIPTION

1. Burner pan assy
2. Key valve assembly
3. Flex connector (2)
4. Lava granules (10 lbs)
& lava coals (6 lbs)

Fig. 4-1

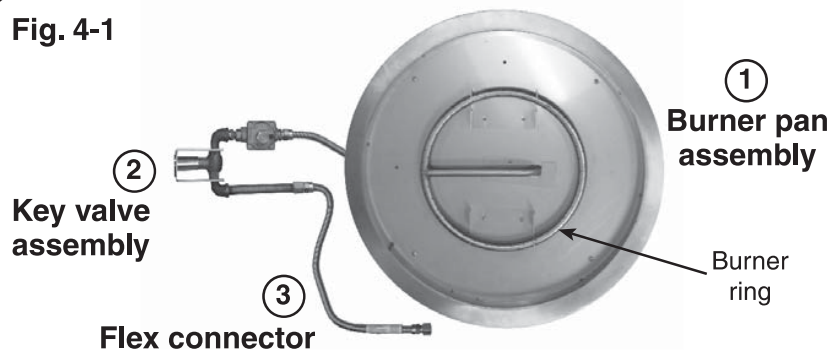

② Key Valve front view



Fig. 4-7

④ Lava granules & coals

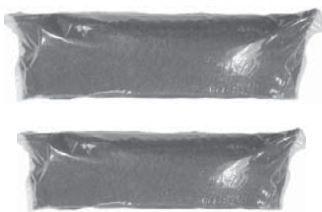


Fig. 4-9

PRE-INSTALLATION AND PREPARATION SAFETY GUIDELINES

- A.** Before installing this unit, check the MINIMUM CLEARANCE TO COMBUSTIBLES section to ensure that the surrounding area is **properly sized for the installation**.
- B.** The unit is for outdoor use only. **DO NOT** install or use this appliance inside a building, garage, or any other enclosed area, including recreational vehicles and/or boats. **This unit must be installed in such a manner that the vent opening at the base of the unit remains clear and free of all obstructions at all times and during all weather conditions.**
- C. CHECK GAS TYPE** (natural gas or propane): The gas supply you intend to use may not be the same as that stated on the unit rating plate as purchased.
- D. FOR NATURAL GAS:** The minimum inlet gas-supply pressure for purposes of input adjustment is **5"** water column (w.c.), and the maximum inlet gas-supply pressure is **10.5 "** w.c.
- E.** Gas piping system must be sized to provide minimum inlet pressure at the maximum flow rate (BTU/hr). Undue pressure loss will occur if the pipe is too small, or the run is too long.
- F.** For installations at elevations above 2,000 ft., contact your local dealer or gas supplier before installing. Input ratings should be reduced approximately 4% for each 1,000 ft. above sea level. Refer to the National Fuel Gas Code.
- G.** The unit and its individual shutoff valve must be disconnected from the gas-supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psi (3.5 kPa). This is accomplished by closing the gas-supply line valve. The unit must be isolated from the gas-supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas-supply piping system at test pressures equal to or less than 1/2 psi (3.5 kPa).
- H. INSTALLER NOTE:** This unit should be installed so that it can be removed if service is required.
- I. GAS-SUPPLY PLUMBING REQUIREMENTS**

Apply only joint compounds that are resistant to all gasses on all male pipe fittings. Make sure to tighten every joint securely. Do not use pipe joint compound to connect flare fittings. Bring the gas-supply pipe up from beneath the enclosure near its center (if applicable).

CAUTION: Installation and maintenance must be done by an NFI Certified or other qualified professional installer. Installer, read these instructions before installing this product. Be sure you understand all safety precautions and warnings contained in this manual.

Note: An external on/off valve in the gas line is required for safety when the unit is not in use. It also provides for convenient maintenance and repair.

INSTALLATION SAFETY GUIDELINES

- A. Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that control compartment, burners and circulating air passageways of the appliance be kept clean.
- B. Carefully inspect for shipping damage. If any parts are damaged, call the dealer.
- C. Correct installation and proper placement of the unit and decorative media is crucial to the safe performance of the unit. See installation instructions for further information.
- D. Ensure that the unit is installed in such a manner that the vent opening at the base of the unit remains obstacle-free at all times and during all weather conditions.
- E. Due to high temperatures, the unit must be located out of traffic areas and away from combustibles.

OPERATING THE UNIT SAFELY AND CORRECTLY

- A. **This appliance is only intended for operation in temperatures above 32°F.**
- B. When shutting the unit down—be sure to TURN THE CONTROL VALVE FULLY OFF.
- C. Children MUST be carefully supervised when they are in the area of this appliance.
- D. **DO NOT** sit or place any part of the body, clothing, or other flammable materials on or near the unit surround. Children and adults should be alerted to the hazard of high surface temperatures and should stay away to avoid burns or clothing ignition.
- E. Every time you use the unit, make sure that:
 - 1. The area around the unit is clear and free from combustible materials, gasoline and other flammable vapors and liquids.
 - 2. There is no blockage of the airflow through the vent openings located on the bottom of the unit.
- F. **WARNING: HOT WHILE IN OPERATION AND FOLLOWING OPERATION.** Serious injury can occur! **DO NOT** throw trash, paper, or other flammable materials onto the unit. **DO NOT** leave in operation when unattended.
WARNING: DO NOT operate this unit in the rain.
- G. SOLID FUEL MUST NOT BE BURNED in the unit.
- H. **DO NOT** continue using if you smell unusual odors, or have headaches, nausea, or dizziness.
- I. **DO NOT** store any combustible materials, gasoline, and any other flammable vapors/liquids in the vicinity of the unit. Provide adequate clearance for servicing and operation.
- J. Matches, paper, garbage, or any other material must not be thrown onto the unit or into the flame.
- K. **DO NOT** use the unit if any part of it has been underwater. Immediately call a qualified professional service technician to inspect the set and to replace any part of the control system that has been underwater.

IMPORTANT SAFETY INFORMATION**BE CAREFUL**

If not installed and used correctly per these instructions, this product can cause serious injury.

CAUTION: Installation and maintenance must be done by an NFI Certified or other qualified professional installer. Read these instructions before installing this unit. Be sure you understand all safety precautions and warnings contained in this manual.

A. FOR OUTDOOR USE ONLY.

B. When shutting the unit down—be sure to **TURN THE CONTROL VALVE FULLY OFF.**


C. WARNING: CARBON MONOXIDE POISONING MAY LEAD TO DEATH. DO NOT MODIFY THIS unit OR ITS CONTROLS, EXCEPT AS PROVIDED FOR IN THIS MANUAL. Any other change may be dangerous. Improper installation or use of the unit can cause serious injury or death from fire, burns, explosions, or carbon monoxide poisoning.

D. Check state and local codes to determine if the unit is permitted in your locality before installation.

E. The manual valve allows adjustable flame height and heat output. **THESE SETTINGS MUST ALWAYS BE HIGH ENOUGH FOR THE FLAME TO BE CLEARLY VISIBLE.**

MINIMUM CLEARANCE TO COMBUSTIBLES**Fig. 7-1****OCB-34 shown**

Note: Nothing should be above the unit.

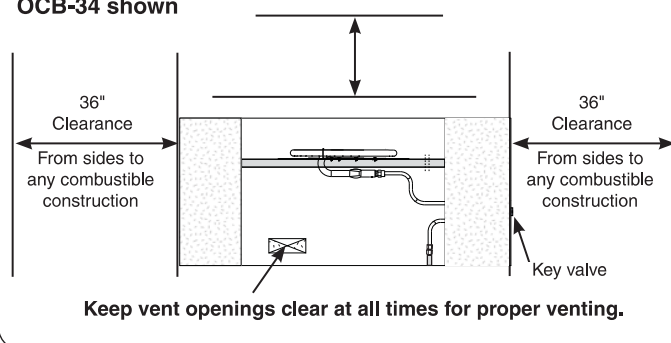**Clearances to Combustible Construction:**

Side walls: 36" from each side of the enclosure.

Ceiling: **Nothing should be above the unit.**

Flooring: 0" - Can be installed on deck, slab, floor, etc.

The dimensions shown in Fig. 7-1 are **MINIMUM CLEARANCES** to maintain when you install this unit. **ALL SIDES** of the enclosure opening **MUST BE AT LEAST 36"** from any combustible side walls. The unit **MUST NOT BE** installed under any type of ceiling or overhang.

INSTALLATION

Important: Be sure you have read and understand all safety precautions and warnings contained in this manual.

BEFORE PROCEEDING, CAREFULLY READ ALL OF THE IMPORTANT SAFETY INFORMATION CONTAINED IN THIS OWNER'S MANUAL, INCLUDING:

- A.** IMPORTANT SAFETY INFORMATION.
- B.** INSTALLATION SAFETY GUIDELINES.
- C.** MINIMUM CLEARANCE TO COMBUSTIBLES.

BE SURE THE GAS SUPPLY FOR THE UNIT IS TURNED OFF.

Note: When installing the unit to natural gas, you must have a gas-supply line that has been installed by a qualified professional technician in accordance with all local codes. **Refer to the PARTS LIST when installing the unit.**

INSTALLATION (Cont.)


OCB-34 INSTALLATION SPECIFICATIONS

When installing in your enclosure, allow a minimum of 8" (vertical) from the key valve to the burner pan (Fig. 8-1), and set back the edge of the burner pan no more than 30" from the outer wall (see Fig. 8-1 and 8-2). This will allow adequate access for maintenance and troubleshooting.


Note: Two vent openings for adequate combustion air must be provided (Fig. 8-1).

Recommended Installation Specifications (nominal)


OCB-34

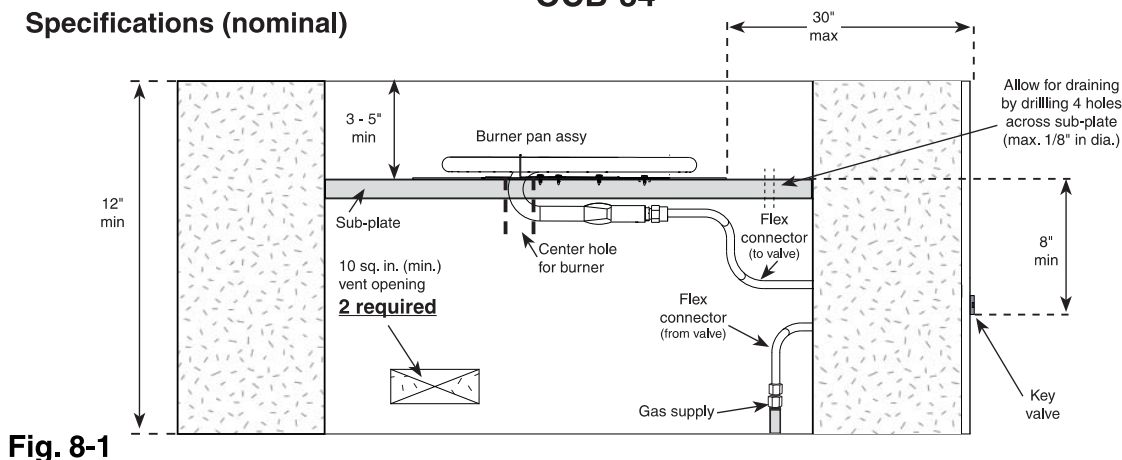

Top view

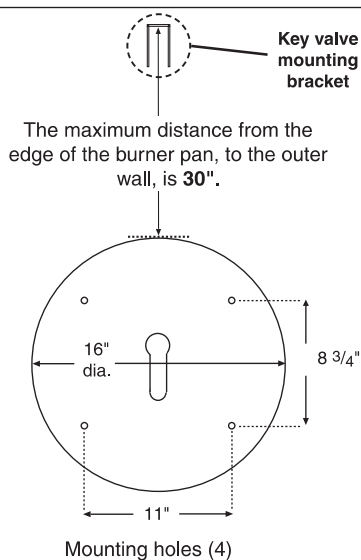

Key valve dimensions

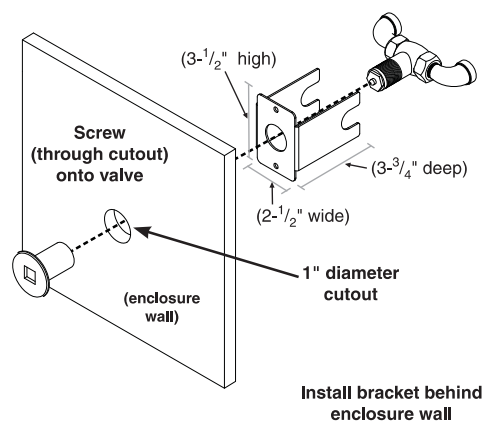

INSTALLATION (Cont.)

OCB-24 INSTALLATION SPECIFICATIONS

When installing in your enclosure, allow a minimum of 8" (vertical) from the key valve location to the burner pan (Fig. 9-1), and set back the edge of the burner pan no more than 30" from the outer wall (see Fig. 9-1 and 9-2). This will allow adequate access for maintenance and troubleshooting.

Note: Two vent openings for adequate combustion air must be provided (Fig. 9-1).

Recommended Installation Specifications (nominal)

OCB-24

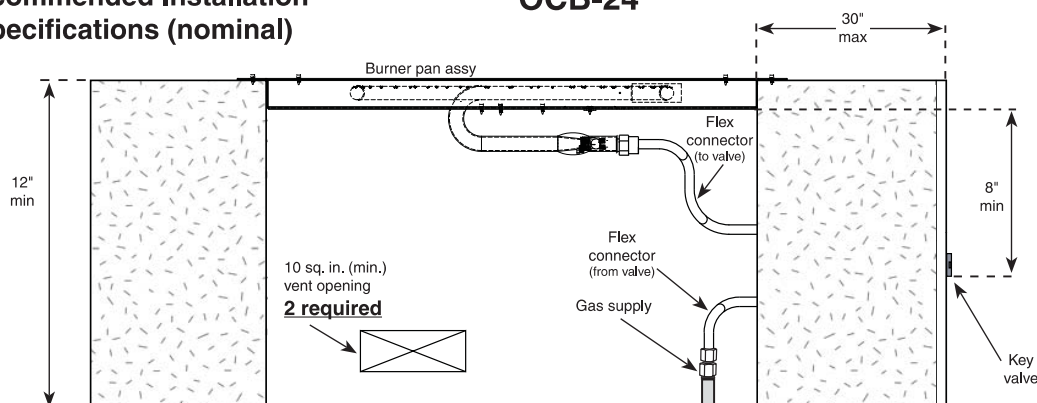


Fig. 9-1

It is recommended that high-temperature silicon caulking (not supplied) is applied along the bottom of the burner pan's hanger before dropping the burner assembly into the opening. Screw holes are provided on the hanger for securing the unit (screws not included).

(control panel model shown)

Top view

The maximum distance from the edge of the opening cutout, to the outer wall, is **30"**.

Note: The recommended cutout/opening in the enclosure for this burner pan is a 24 1/2" diameter.

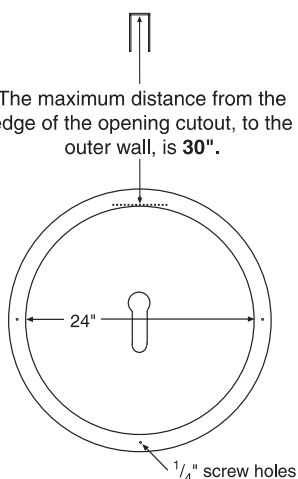


Fig. 9-2

Key valve dimensions

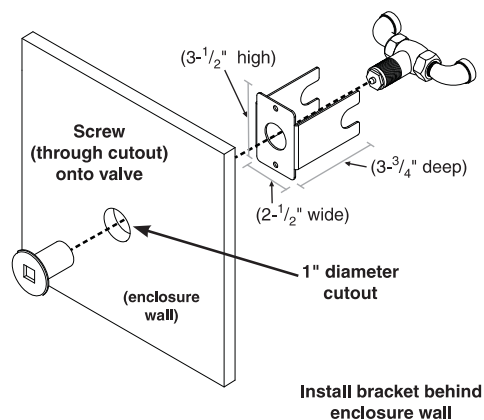


Fig. 9-3

INSTALLATION (Cont.)**CONNECT TO THE GAS SUPPLY**


1. Bring the gas-supply pipe up from beneath the unit near its center.

Note: Locate the gas supply line out of pathways where people may trip over it or in areas where the line may be subject to accidental damage.

2. Install the supplied flare adaptor to the gas supply (NPT) using a gas pipe sealing compound or Teflon tape (see Fig. 10-1).
3. Connect the flex connector coming from the burner assembly to the gas supply adaptor (see Fig. 10-1).

LEAK TEST

Turn on the gas supply, ignite the burner, and test at all connections for leaks using a soapy water solution. If bubbles appear, a leak is present. Turn off the gas and tighten at all connections. Repeat until no leaks are present. If a leak persists, turn off the gas supply and contact the local gas company or dealer. **NEVER USE A FLAME TO CHECK FOR LEAKS.**

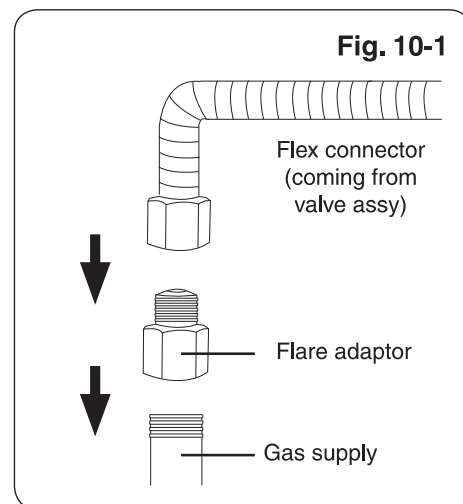

DECORATIVE MEDIA OPTIONS


The unit has several options for decorative media, each with a different set of components and setup instructions. These setup instructions are for your reference. None of these options come with the outdoor campfire kit and must be ordered separately.

Note: Lava media (**included with burner**) is always placed on the burner first in each option. This provides an important base for the diffusion of gas and air. Depending on fire-pit size, more lava than supplied may be required.

OPTIONAL CAMPFIRE LOGS

OCL-34

<u>Item</u>	<u>Part #</u>	<u>Description</u>	<u>Qty</u>
1.	OCL-8YC	"Y" center support log	1
2.	OCL-15BC	Curved bottom log	2
3.	OCL-12T	12" top log with knothole	1
4.	OCL-13T	13" top log with knothole	1
5.	HRDL-12T	12" top log	2
6.	RDL-7T	8" top log	4
7.	WC-6	Wood chips (6 pcs.)	1

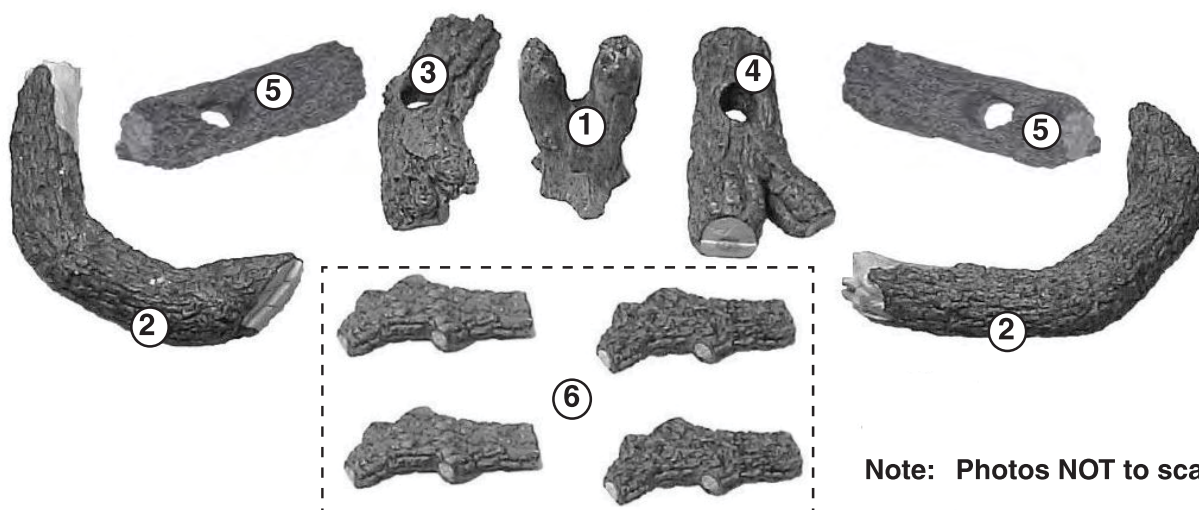


Note: Photos NOT to scale.

OPTIONAL CAMPFYRE LOGS (cont.)**LAVA MEDIA PLACEMENT**

- FIRST**, pour the 10 lb bag of lava granules into the burner pan, evenly covering the burner pan assembly. **THEN**, pour the 6 lb bag of lava coals into the burner pan, evenly covering the burner pan assembly. (Granules are smaller in size, coals are larger.)


LOG PLACEMENT

- Place the Y-shaped support log (Log #1) on the lava in the center of the enclosure (Fig.12-1).

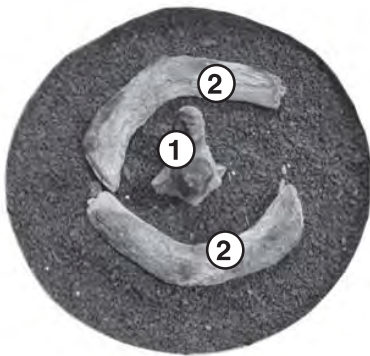Fig. 12-1 Steps 1 & 2

CAUTION: CAMPFYRE OR DECORATIVE MEDIA WILL REMAIN HOT FOR SOME TIME AFTER USE. IF YOU NEED TO REPOSITION ANY DECORATIVE MEDIA, USE HEAT-RESISTANT GLOVES OR ALLOW TO COOL BEFORE HANDLING.

- Place the two curved bottom logs (Logs #2) on opposite sides of the support log (Log #1). (See Fig.12-1)
- Rest the two (2) knothole top logs (Log #3, Log #4) against the center support log with one end in the lava.
- Rest the next two top logs (Logs #5) against the support log with the other ends resting in the lava, forming a teepee-type stack (Fig. 12-2).

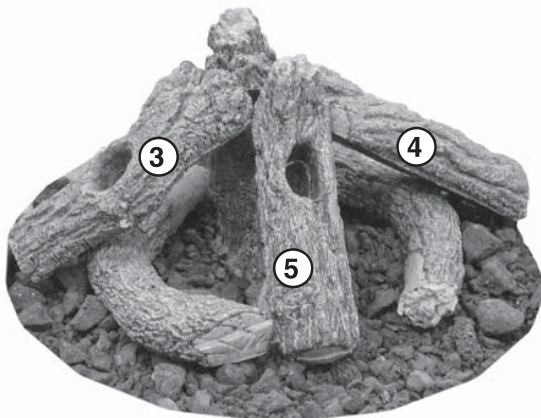Fig. 12-2 Steps 3 & 4**The finished log stack****Fig. 12-3 Steps 5 & 6**

- Place the four (4) smallest logs (PARTS LIST, item #6) so they rest on the curved bottom logs as desired (Fig. 12-3).
- Place the six (6) wood chips (PARTS LIST, item #7) as desired around the log stack (Fig. 12-3).

OPTIONAL BEACHWOOD LOGS AND/OR VOLCANIC STONE


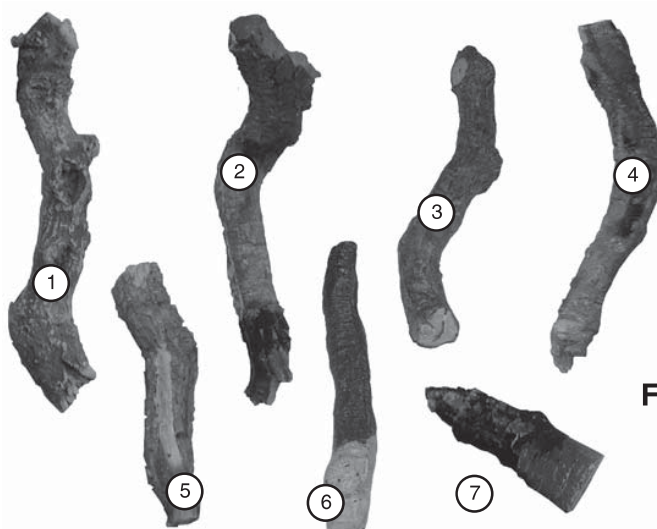


Fig. 13-1

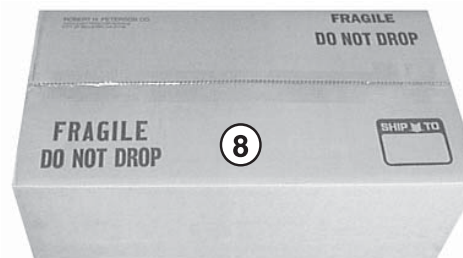

OCBW-34

#	Description	Part Number	Qty
1.	Knotted log	OCBWL-17	1
2.	Hooked log	OCBWL-18	1
3.	Crooked log	OCBWL-16	1
4.	Curved log	OCBWL-15	1
5.	Stripped log	OCBWL-12	1
6.	Long charred log	OCBWL-20	1
7.	Short charred log	OCBWL-9	1
8.	Volcanic stones (box)	VS-25	1

Although log placement may vary, suggested log placement for the Beachwood log set is provided below. These log placements will allow for superior flame pattern and appearance. Please read these instructions completely and carefully before beginning.

LAVA AND STONE PLACEMENT

WARNING: Use only parts specifically approved for use with this Real-Fyre® gas log set. Failure to do so may result in property damage or personal injury. Check with your local Real-Fyre® dealer if you need more information.

- FIRST**, pour the 10 lb bag of lava granules into the burner pan, evenly covering the burner pan assembly. **THEN**, pour the 6 lb bag of lava coals into the burner pan, evenly covering the burner pan assembly. (Granules are smaller in size, coals are larger.)
- Pour the volcanic stones on top to fill the whole burner pan.

With the volcanic stones distributed on top of the lava, nearly any log placement is possible. **It is also possible to use only the Volcanic Stones and no logs at all.**

Some general guidelines include always placing the flat side of each log downward or inward and making sure the logs are positioned so they are stable and will not shift or roll. Logs must remain in the burner pan when hot.

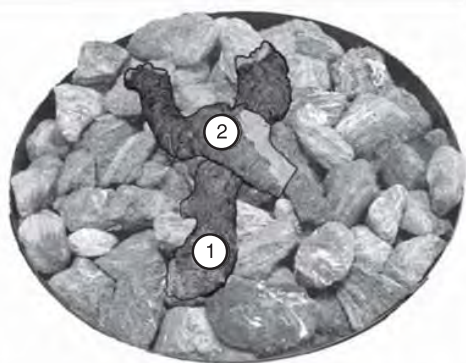
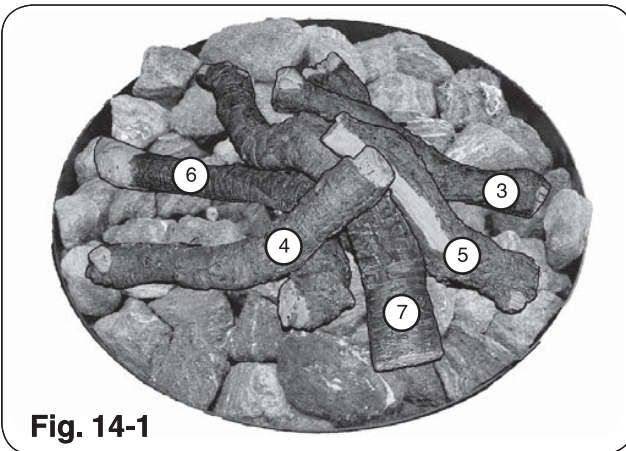
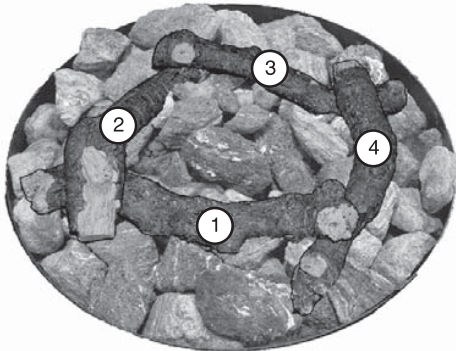
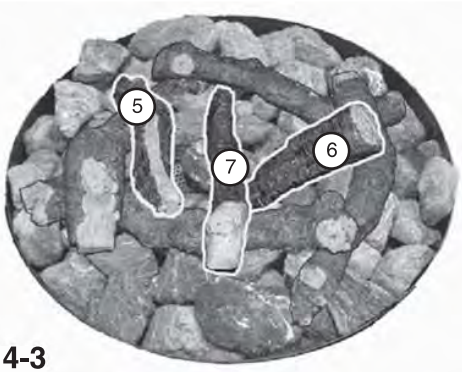
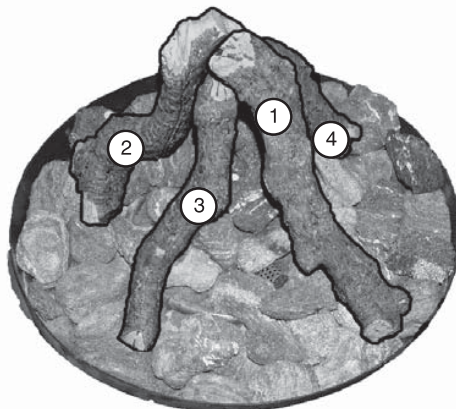


Fig. 13-2

OPTIONAL BEACHWOOD LOGS (cont.)**Fig. 14-1****Beachwood Log Set
Other options****Fig. 14-2****Fig. 14-3****Fig. 14-4**

CAUTION: CAMPFIRE OR DECORATIVE MEDIA WILL REMAIN HOT FOR SOME TIME AFTER USE. IF YOU NEED TO REPOSITION ANY DECORATIVE MEDIA, USE HEAT-RESISTANT GLOVES OR ALLOW TO COOL BEFORE HANDLING.


LOG PLACEMENT OPTION TWO - LOG SQUARE

1. Lay Log #1 across the volcanic stone, then lay the hooked part of Log #2 over one end of Log #1 at an angle of approximately 90 degrees (see Fig. 15-2).
2. Lay an end of Log #3 over the unattached end of Log #2 at a 90-degree angle (see Fig. 14-2).
3. Place one end of Log #4 over the open end of Log #3 and the other end underneath the open end of Log #1, creating a kind of square (see Fig. 14-2).
4. Lay the remaining logs across the already positioned logs in an attractive pattern (see Fig. 14-3).

LOG PLACEMENT OPTION THREE - LOG "TEEPEE"

1. Place the ends of three or four logs into the volcanic stones with their flat sides facing inward and their tops pointed upward. Then lean their other ends against each other at an angle in the center of the fire ring (see Fig. 14-4).
2. Once you have a stable set of logs to use as a "teepee" frame, place the other logs similarly as desired (see Fig. 14-5).

Enjoy your log set. After the logs are placed, consider how changing their arrangement could produce even more pleasing flame patterns. Always observe the caution at the top of this page and the guidelines on the previous page.

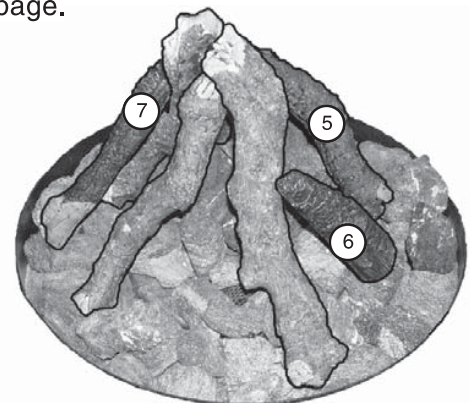**Fig. 14-5**

OPTIONAL GLASS/GEMS OR RIVER ROCK ON GLASS/GEMS

Item	Description	Part Number	Qty
1.	Glass (10 lb bag)	GL-10-x*	2**
or	Gems (10 lb bag)	GLG-10-x*	
2.	Box of river rock (optional)	STN-10	1

* Replace "x" in model number with the applicable glass/gem code for your chosen media. Glass and gems are available in various colors; contact your dealer for further details.

** Depending on fire-pit size, additional glass/gems may be required.



Note: Installation is the same for glass and gems. Glass shown here.

LAVA GRANULE PLACEMENT

Important: DO NOT use the 6 lb bag of lava coals when installing this burner system with glass. Set the lava coals aside or discard. Only use the 10 lb bag of lava granules. (The granules are smaller in size.)

1. Pour the 10 lb bag of lava granules into the burner pan, evenly covering the burner pan assembly.

GLASS/GEM PLACEMENT

1. Pour the glass/gems out of the bag(s), evenly covering the lava (Fig. 15-1).

Note: If extra glass remains after properly filling the pan, it may be stored for future use.

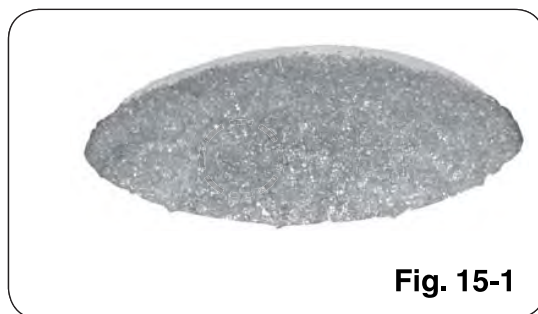


Fig. 15-1

STONE PLACEMENT

1. Place river stones in a decorative pattern on top of the glass/gems.

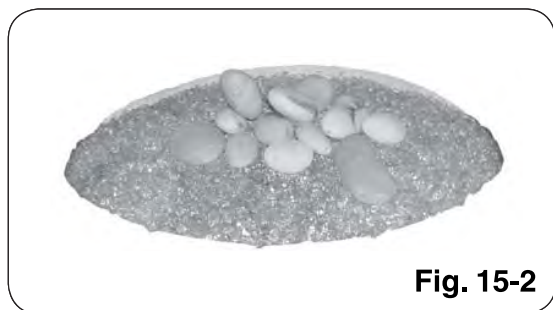


Fig. 15-2

CAUTION: CAMPFYRE OR DECORATIVE MEDIA WILL REMAIN HOT FOR SOME TIME AFTER USE. IF YOU NEED TO REPOSITION ANY DECORATIVE MEDIA, USE HEAT-RESISTANT GLOVES OR ALLOW TO COOL BEFORE HANDLING.

NOTES PAGE

Please use this page to record any information about your burner system that you may want to have at hand.

OPERATING THE UNIT - LIGHTING AND EXTINGUISHING

FOR YOUR SAFETY, READ BEFORE LIGHTING

WARNING: IF YOU DO NOT FOLLOW THESE INSTRUCTIONS EXACTLY, A FIRE OR EXPLOSION MAY RESULT, CAUSING PROPERTY DAMAGE, PERSONAL INJURY, OR LOSS OF LIFE.

- A. BEFORE LIGHTING**, smell all around the unit area for gas. Be sure to smell next to the floor, because some gas is heavier than air and will settle on the floor.
- B. WHAT TO DO IF YOU SMELL GAS**
1. **Shut off the gas to the appliance.**
 2. **Extinguish any open flame.**
 3. **If odor continues, immediately call** your gas supplier or the fire department.
- C.** Use only a proper key to turn the gas line valve. Never use tools. If the valve will not turn, **DO NOT** try to repair it. Call a qualified professional service technician. Force or attempted repair may result in fire or explosion.

MANUAL (MATCH) LIGHTING INSTRUCTIONS

1. **STOP!** Read the safety information above.
2. Lay a lighted long-stem match on the surface of the decorative media near the burner ring (**do not hold the match in your hand**) or use a lighted long-necked butane lighter (Fig. 17-1).
3. Slowly turn the key valve to the **ON** position (see Fig. 17-2). Your burner should light.
4. If the burner does not light before the match goes out, immediately turn the valve to the **OFF** position.
5. Wait approximately five (5) minutes to clear out any gas, and repeat steps 1-4 above.
6. If your burner fails to light again, turn the valve to the **OFF** position and contact your dealer or gas supplier.
7. **To extinguish your gas burner**, turn the valve to the **OFF** position. Be sure the valve is turned fully off to avoid any gas leakage.

Fig. 17-1


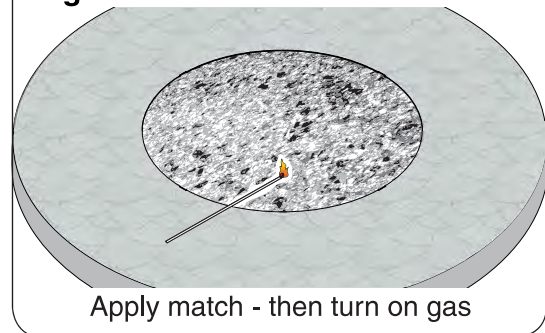


Fig. 17-2

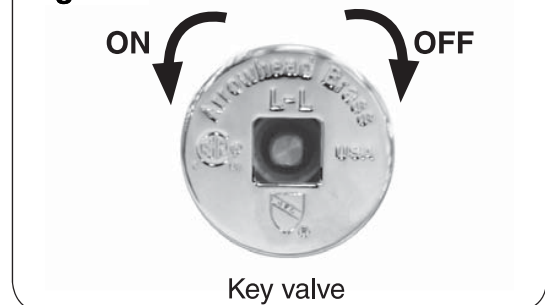

ACTIONNANT L'UNITÉ - ÉCLAIRAGE ET S'ÉTEIGNANT

POUR VOTRE SÛRETÉ, LISEZ AVANT L'ALLUMAGE


AVERTISSEMENT : Si vous ne suivez pas ces instructions exactement, une incendie ou une explosion peut résulter, entraînant des dégâts matériels, le dommage corporel, ou des pertes humaines.

- A. AVANT L'ALLUMAGE**, sentez tous autour de l'unité de superficie pour le gaz. Soyez sûr de sentir à côté du plancher, parce qu'un certain gaz est plus lourd que l'air et arrangera sur le plancher.
- B. CE QUI À FAIRE SI VOUS SENTEZ LE GAZ**
1. Coupez le gaz à l'appareil.
 2. Éteignez-vous n'importe quelle flamme nue.
 3. Éteignez-vous n'importe quelle flamme nue. Si l'odeur continue, appelez immédiatement votre fournisseur de gaz ou les corps de sapeurs-pompiers.
- C.** Employez seulement une clef appropriée pour tourner la ligne de gaz valve. N'utilisez jamais les outils. Si la valve ne tournera pas, n'essayez pas de la réparer. Appelez un technicien qualifié de service professionnel. La force ou la réparation essayée peut avoir comme conséquence l'incendie ou l'explosion.

INSTRUCTIONS MANUELLES D'ÉCLAIRAGE

1. **ARRÊT!** Lisez l'information de sûreté ci-dessus.
2. Étendez une allumette allumée de long-tige sur la surface des médias décoratifs près de l'anneau protecteur (**ne tenez pas l'allumette dans votre main**) ou emp (Fig. 18-1).
3. Tournez lentement la valve principale à la position de fonctionnement (see Fig. 18-2). Votre brûleur devrait s'allumer.
4. Si le brûleur ne s'allume pas avant que l'allumette sorte, tournez immédiatement la valve à la position de repos.
5. Attendez approximativement cinq (5) minutes pour dégager dehors n'importe quel gaz, et répétez les étapes 1-4 ci-dessus.
6. Si votre brûleur ne s'allume pas encore, tournez la valve à la position de repos et contactez votre fournisseur de revendeur ou de gaz.
7. **Pour s'éteindre votre brûleur à gaz**, tournez la valve à la position de repos. Soyez sûr que la valve est arrêtée entièrement pour éviter n'importe quelle fuite de gaz.

Fig. 18-1

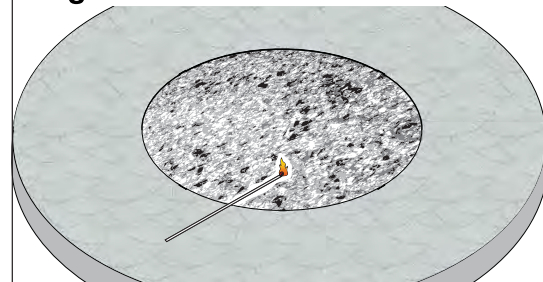

Appliquez l'allumette - allumez alors le gaz

Fig. 18-2



Key valve

OPERATION

Each installation site for any unit presents its own unique combustion environment. Specific factors such as weather, wind currents, yard debris, altitude, drafts, the size of the surrounding area, all have an influence on the proper operation of the unit. A normally operating unit will demonstrate the following characteristics:

- a) A lively, realistic yellow flame,
- b) Odor-free.
 - If the flame is not clean (identifiable by excessive sooting on the decorative media), refer to the CLEANING AND MAINTENANCE section below.

CLEANING & MAINTENANCE

- A. Always shut off the gas to the unit while performing service work.
- B. Allow the unit to cool before servicing.
- C. The unit should be inspected regularly. Excessive debris can build up on this unit from leaves, dirt, or other debris. It is critical that all control components, burners, and the surrounding area be kept clean and free of all obstructions.

Keep the surrounding area at the base of the unit clean and free of obstructions at all times.

- D. The burner assembly must be replaced prior to the unit being put into operation if it is evident that the burner is damaged. Contact your local dealer for replacement parts.
- E. Periodically perform visual checks of the burner flames. The burner flames should be blue at the base with a combination of blue/yellow at the body and tips. Contact a qualified service person for maintenance.

CAUTION

HOT DURING OPERATION AND AFTER USE. Children must be supervised when in the vicinity of this appliance. Serious injury may occur! Children must be alerted to the hazard of high surface temperatures and should stay away to avoid burns or clothing ignition.

PETERSON CAMPFYRE LIMITED WARRANTY**THREE (3) YEAR LIMITED WARRANTY**

All Peterson Outdoor Campfyre logs, enclosures, and burner component parts, (except valves and controls) are covered by a three (3) year limited warranty.

All Peterson valves and controls are covered by a separate one (1) year limited warranty (excluding batteries).

PLEASE KEEP A COPY OF YOUR SALES SLIP FOR PROOF OF PURCHASE

This warranty applies to the original purchaser and to single family residential use only. It commences from date of purchase, and is valid only with proof of purchase.

This warranty does not cover parts becoming defective through misuse, accidental damage, electrical damage, improper handling, lack of routine maintenance, storage, and/or installation. Product must be installed (and gas must be connected) as specified in the instructions or operator's manual, by a **qualified professional installer**. Accessories, parts, valves, remotes, etc., when used must be Peterson Co. product.

This warranty **does not** apply to rust, corrosion, oxidation, or discoloration, unless the affected component becomes inoperable. It **does not** cover labor or labor-related charges.

This warranty specifically excludes liability for **indirect, incidental**, or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specified legal rights, and you may have other rights that may vary from state to state.

For additional information regarding this warranty, or to place a warranty claim, contact the R.H. Peterson dealer where the product was purchased.

**TO REGISTER YOUR PRODUCT ONLINE GO TO: WWW.RHPETERSON.COM,
AND CLICK ON PRODUCT REGISTRATION. THANK YOU FOR YOUR PURCHASE.**

Quality Check			Date: _____	
Burner Orifices	Nat. _____	L.P. _____	Leak Test: _____	Model#: _____
Main:	_____	_____	Burn Test: _____	Serial#: _____
Other:	_____	_____	Gas Type: <u>Nat. / L.P.</u>	Air Shutter: _____
			Inspector: _____	