# CHOICE ACCESSIBLE KIT

INSTALLER: Leave these instructions with consumer. CONSUMER: Retain for future reference.

Model # 24171-11

# OVEN HOOD HANDLE KIT (3600-51) CONTROL KNOB KIT (See separate instructions packed with handle kit for installation)

# This Accessible Kit is for installation on Choice Model Grills (2021 and newer only):

C430, C540, C650, CM430, CM540, CM650

## To install the Oven Hood Handle Kit:

See the separate instructions packed with the handle kit.

### To install the Control Knob Kit:

- 1. Be sure the unit is completely cool, the control knobs are turned to the OFF position, and the gas supply is turned off.
- 2. Remove the existing control knobs from the grill control panel.

**Note:** Multi-user models have knobs locked onto the valve stems. Use the included .078" (2mm) hex key to unlock and remove the knobs. See Fig. 1-3.

- **3.** Take the bezel locator disc and insert it into a bezel (see Fig. 1-1).
- **4.** Remove the plastic backing from the adhesive ring found on the backside of the bezel.
- 5. With the red indicator line pointing upright in the twelve o'clock position, slide the bezel onto a grill valve stem with the stem penetrating through the center hole of the bezel locator disc. See Fig. 1-2.
- **6.** Press and hold the bezel firmly against the grill control panel for 20 seconds to properly adhere the bezel.
- **7.** Gently pry off the bezel locator disc with a small flat head screwdriver and set the disc aside to be used for the remaining bezels.
- **8.** Take a new control knob and install it onto the valve stem with bezel.
- **9.** If desired, the knob may be locked to the valve stem with the included .078" (2mm) hex key (see Fig. 1-3).
- **10.** Repeat this procedure for the other knobs and bezels.

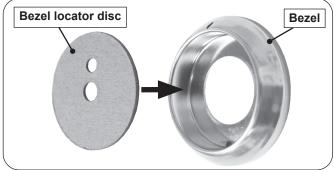


Fig. 1-1 Insert bezel locator disc into bezel

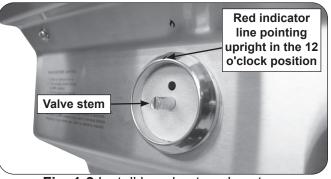


Fig. 1-2 Install bezel onto valve stem

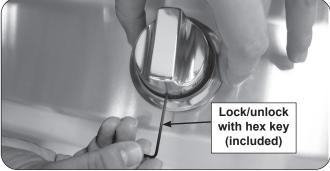


Fig. 1-3 Lock/unlock knob