


Wall Switch

Model #: WS-3

INSTALLER: Leave these instructions with consumer.

CONSUMER: Retain for future reference.

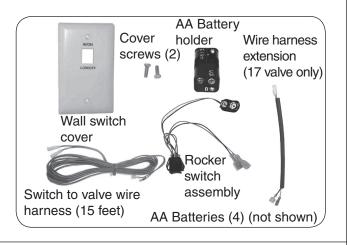

This wall switch is for installation with a 15 or 17 valve system by a qualified professional service technician.

INSTALL WALL SWITCH

CAUTION: Ensure the burner and valve system are OFF and completely cool prior to any installation.

- 1. Select a location for the wall switch near the fireplace. This needs to be within 15' from the fireplace for the length of wiring supplied, and to supply sufficient millivoltage between the wall switch and the pilot generator.
- 2. At the wall switch location selected, cut out a clearance hole for direct wall or switch box mounting.

Note: Allow enough space to incorporate the battery holder. We recommend using a deep switch box (3" deep or greater).

- 3. Tie about 6" of chain or a small weight to a cord to create a plumb line. Hang the plumb line from the wall switch location to the top of the wall baseboard. Immediately below the wall switch location, as indicated by the plumb line, drill a 1/2" to 3/4" hole.
- **4.** Lower the plumb line through the switch location hole, within the stud space, down to the baseboard level. Pull the chain or the weight out of the 1/2" to 3/4" hole at the baseboard using a stiff hooked wire (a bent wire coat hanger works well).
- 5. Remove the weight or the chain from the plumb line. Tie one end of the wire cable to the plumb line and pull the plumb line back up through the wall switch location to expose several inches of wire.
- **6.** Feed the rocker switch assembly wiring through the front of the wall switch cover, and snap the rocker switch into place (see Fig. 1-1).
- 7. Connect the two terminals on the rocker switch to the two terminals on the wire harness (see Fig.1-1). Ensure a tight connection.
- **8.** Connect the battery holder to the connector coming from the rocker switch assembly (see Fig. 1-1). Insert 4 AA batteries in the battery holder, ensuring the polarities are correct.
- Attach the wall switch cover to the switch box using the 1/4" machine screws supplied.

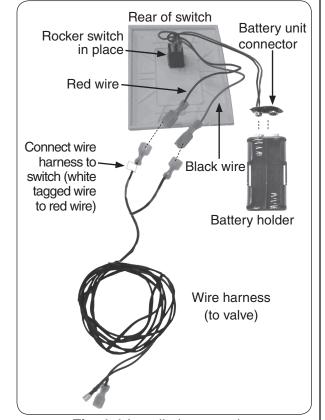


Fig. 1-1 Installation overview

Connect To 15 Valve

 Attach the LARGE female connector of the wire harness to the OUTER male spade located on the valve. Attach the SMALL female connector to the INNER male spade on the valve. See Fig. 2-1.

Note: This unit does not require an outside electrical source.

2. Follow all instructions supplied with your burner / valve system to complete installation.

Connect To 17 Valve

- 1. Connect the two terminals on the wire harness to the two terminals on the <u>wire harness extension</u> (see Fig. 2-2,A).
- 2. Attach the male connector from the wire harness extension to the female connector located on the valve (see Fig. 2-2,B).

Note: This unit does not require an outside electrical source.

3. Follow all instructions supplied with your burner / valve system to complete installation.

OPERATION

Light the pilot according to the lighting instructions supplied with your burner / valve system.

To use the wall switch to control the flame height, press HI/ON and the flame height control knob will rotate counter-clockwise, turning the main burner on, and increasing the flame height to your desired level (see Fig. 2-3, A). To reduce the flame height, press LOW/OFF. To turn the main burner off, hold the LOW/OFF switch down until the flame is extinguished (see Fig. 2-3, B). Pilot will remain lit. See instructions supplied with your burner / valve system for complete shut off.

FORYOUR SAFETY, never leave your burner system operating unattended. Be sure all cautions and warnings are observed in your burner / valve system owner's manual.

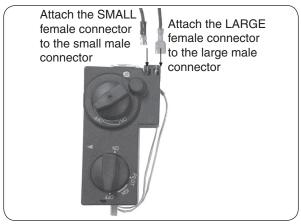


Fig. 2-1 Connect to 15 valve

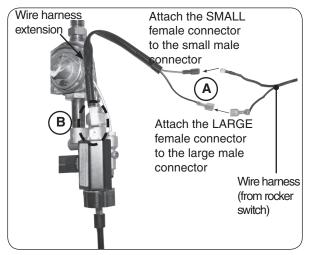


Fig. 2-2 Connect to 17 valve

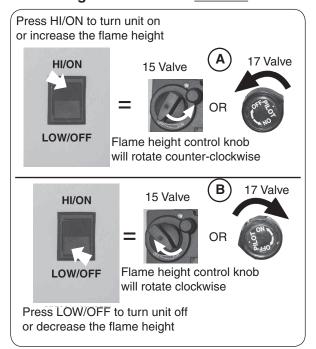


Fig. 2-3 Switch operations