


**Models:**  
EPK-2V(P)-TR  
EPK-3V(P)-TR

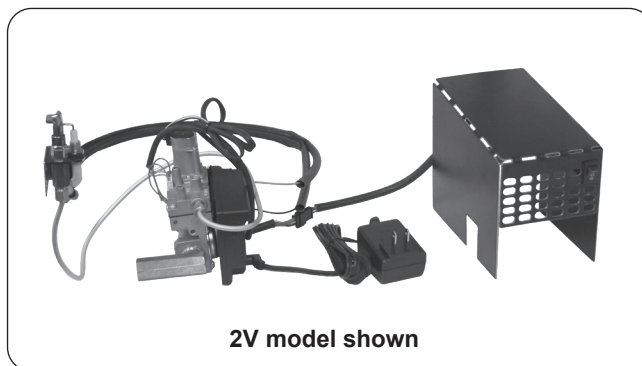

2V model shown

(Suitable for G4 and G45 series burners)

- **INTERMITTENT SPARK IGNITION PILOT**
- **REMOTE OR MANUAL OPERATION**
- **AC POWER OPERATION**
- **VARIABLE FLAME HEIGHT CONTROL**

## EPK-2V/3V-TR PILOT KITS

### **WARNING**

If the information in this manual is not followed exactly, a fire or explosion may result, causing property damage, personal injury, or loss of life.

Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.

### **WHAT TO DO IF YOU SMELL GAS:**

- Open a window.
- Do not try to light any appliance.
- Do not touch any electrical switch; do not use any phone in the building.
- Immediately call the gas supplier from a neighbor's phone and follow the gas supplier's instructions.
- If you cannot reach the gas supplier, call the fire department.

**Installation and service must be performed by an NFI Certified or other qualified professional installer, service agency, or the gas supplier.**

### **INSTALLER & CONSUMER**

These instructions **MUST** be retained with this appliance

**Important:** Read these instructions carefully before starting installation of the burner control system.

The Peterson Real Fyre burner system is to be installed only in a solid-fuel-burning fireplace with a working flue constructed of noncombustible material. Solid fuels shall not be burned in a fireplace where the unit is installed. The installation, including provisions for combustion, ventilation air, and required minimum permanent vent opening, must conform with the *National Fuel Gas Code (ANSI Z223.1/NFPA 54)* and applicable local building codes. In Canada, the installation must conform with the *Natural Gas and Propane Storage and Handling Installation Code (CSA-B-149.1)*. A damper stop clamp is included to maintain the minimum permanent vent opening and to prevent full closure of the damper blade. **The chimney damper must be fixed fully opened when burning the unit. The burner system is designed to burn with yellow flames; thus, adequate ventilation is absolutely necessary.**



We recommend that our gas hearth products be installed and serviced by professionals who are certified in the U.S. by the National Fireplace Institute® (NFI) as NFI Gas Specialists.

# TABLE OF CONTENTS

## GETTING STARTED

IMPORTANT INFORMATION .....	3
ELECTRICAL SAFETY INFORMATION .....	4
SPECIFICATIONS .....	4
REPLACEMENT PARTS LIST - 2V MODEL .....	5
REPLACEMENT PARTS LIST - 3V MODEL .....	6

## INSTALLATION

INSTALLATION .....	7
<i>PREPARATION</i> .....	7
<i>ELECTRICAL SETUP (if applicable)</i> .....	7
<i>INSTALL PILOT MOUNTING BRACKET</i> .....	7
<i>INSTALL THE VALVE</i> .....	7
<i>INSTALL THE FLAME DIVERTER BRACKET</i> .....	8
<i>INSTALL THE PILOT/IGNITER ASSEMBLY TO THE BURNER</i> .....	8
<i>CONNECT TO GAS SUPPLY</i> .....	9
<i>CHECKING THE CONTROL MODULE</i> .....	10
<i>CONNECT TO A POWER SUPPLY</i> .....	11
<i>INSTALL/REPLACE REMOTE TRANSMITTER BATTERIES</i> .....	11
<i>HEAT SHIELD PLACEMENT</i> .....	11
<i>DECORATIVE MEDIA REPLACEMENT</i> .....	11

## USE, CARE, & SERVICE

LIGHTING INSTRUCTIONS .....	12
<i>REMOTE LIGHTING</i> .....	12
<i>MANUAL LIGHTING</i> .....	13
<i>SHUTTING DOWN</i> .....	13
<i>PILOT APPEARANCE</i> .....	13
REMOTE OPERATING INSTRUCTIONS .....	14
<i>ORIENTATION</i> .....	14
<i>FLAME HEIGHT</i> .....	14
<i>TIMER</i> .....	14
<i>TEMPERATURE INDICATOR ( °F or °C)</i> .....	14
SYNCING THE REMOTE SYSTEM .....	15
<i>SYNCING THE REMOTE</i> .....	15
TROUBLESHOOTING .....	16
ELECTRONIC PILOT TROUBLESHOOTING .....	17
WARRANTY .....	18

## IMPORTANT INFORMATION

### **CHECK TO BE SURE THAT THE PROPER FUEL GAS IS BEING USED WITH THIS PILOT KIT.**

The installation, including provisions for combustion and ventilation air, must conform with local codes, or in the absence of local codes, with the National Fuel Gas Code (ANSI Z223.1/NFPA 54).

This component and its individual shutoff valve must be disconnected from the gas-supply piping system when testing at pressures that exceed  $\frac{1}{2}$  psig. This is accomplished by closing the gas-supply line valve.

This component must be isolated from the gas-supply piping system by closing its individual manual shutoff valve during any testing of the gas-supply system at test pressures up to and including  $\frac{1}{2}$  psig.

A fireplace screen must be in place when the gas burner system is in operation. Unless other provisions for combustion air are provided, the screen shall have an opening(s) for introduction of combustion air.

### **WHEN GLASS FIREPLACE ENCLOSURES (DOORS) ARE USED, OPERATE THE BURNER SYSTEM WITH THE GLASS DOORS FULLY OPEN; BOTH SIDES IF THE FIREPLACE IS A SEE-THROUGH TYPE.**

This appliance may be installed in an aftermarket, permanently located, manufactured (mobile) home where not prohibited by local codes. Installation of appliances designed for manufactured homes or mobile homes must conform with *Manufactured Home Construction and Safety Standard, Title 24 CFR, Part 3280* in the U.S.; or with *CAN/CSA Z240 MH* in Canada; or with *ANSI/NCSBCS A225.1/NFPA 501A, Manufactured Home Installations Standard* when such as standard is not applicable.

Do not use this appliance if any part has been underwater. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control that has been underwater.

#### **TO PREVENT VALVE DAMAGE AND FAILURE:**

**IT IS CRITICAL THAT THE HEAT SHIELD BE PLACED CORRECTLY OVER THE VALVE PRIOR TO OPERATION.**

**KEEP LAVA GRANULES/COALS, SAND/VERMICULITE, EMBERS/GLASS AND ALL FOREIGN OBJECTS AWAY FROM THE PILOT ASSEMBLY, VALVE ASSEMBLY, AND HEAT SHIELD DURING MEDIA PLACEMENT AND AT ALL TIMES.**

## ELECTRICAL SAFETY INFORMATION

- To protect against electric shock, do not immerse cord or plugs in water or other liquid.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate with a damaged cord, plug, or after the appliance malfunctions or has been damaged in any manner. Contact the manufacturer for repair.
- Do not let the cord touch hot surfaces.
- Do not use for purposes other than intended.
- **Use only a properly wired and inspected 120VAC (15 AMP minimum) Ground Fault Circuit Interrupter (GFCI) GROUNDED 3-wire receptacle with this unit.**
- **The provisions of the National Electric Code as well as any local codes must be observed when installing the product.**

## SPECIFICATIONS

The **EPK-2V** accommodates burners up to 30" (nat. gas only).  
The **EPK-2VP** accommodates burners up to 60" (L.P. gas only).  
The **EPK-3V(P)** accommodates burners up to 60" (nat. and L.P. gas).

Refer to the burner owner's manual  
for minimum firebox dimensions.

Model	BTUs	
	Nat.	L.P.
EPK-2V(P)	120k	180k
EPK-3V(P)	200k	320k


**Table 1** - Maximum BTUs

Specification	Value	Qty.
Input electrical requirements	120VAC / 15 AMP minimum / 60 Hz / GFCI outlet	N/A
Remote transmitter battery type	AAA battery	3

**Table 2** - Technical Data


# REPLACEMENT PARTS LIST - 2V MODEL

Note: Photos not to scale

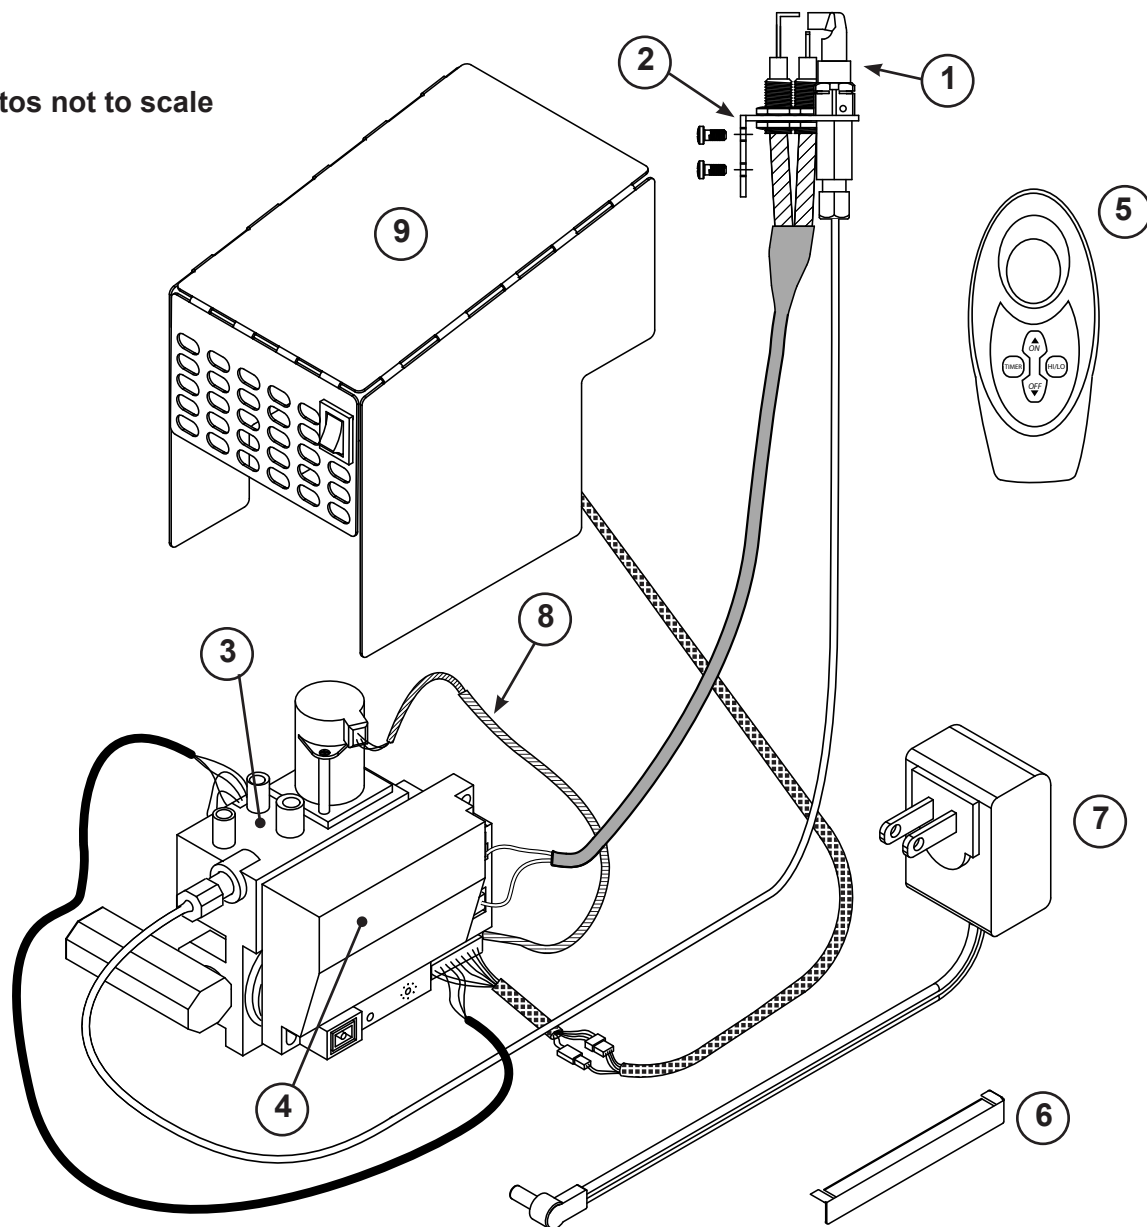

Item	Description	Part No.	Qty.
1.	Pilot/igniter assembly (natural)	PAC-11	1
or	Pilot/igniter assembly (propane)	PAC-11P	1
2.	Pilot mounting bracket kit	PB-51	1
3.	Control valve w/ wire harness (Nat.)	SV-49	1
or	Control valve w/ wire harness (L.P.)	SV-49P	1
4.	Ignition module pack	IMP-5	1
5.	Remote	AT-12V-1	1
6.	Flame diverter bracket	SH-1	1
7.	Power supply	TR-02	1
8.	Main valve wire harness	WH-03	1
9.	Heat shield	HS-41	1

# REPLACEMENT PARTS LIST - 3V MODEL

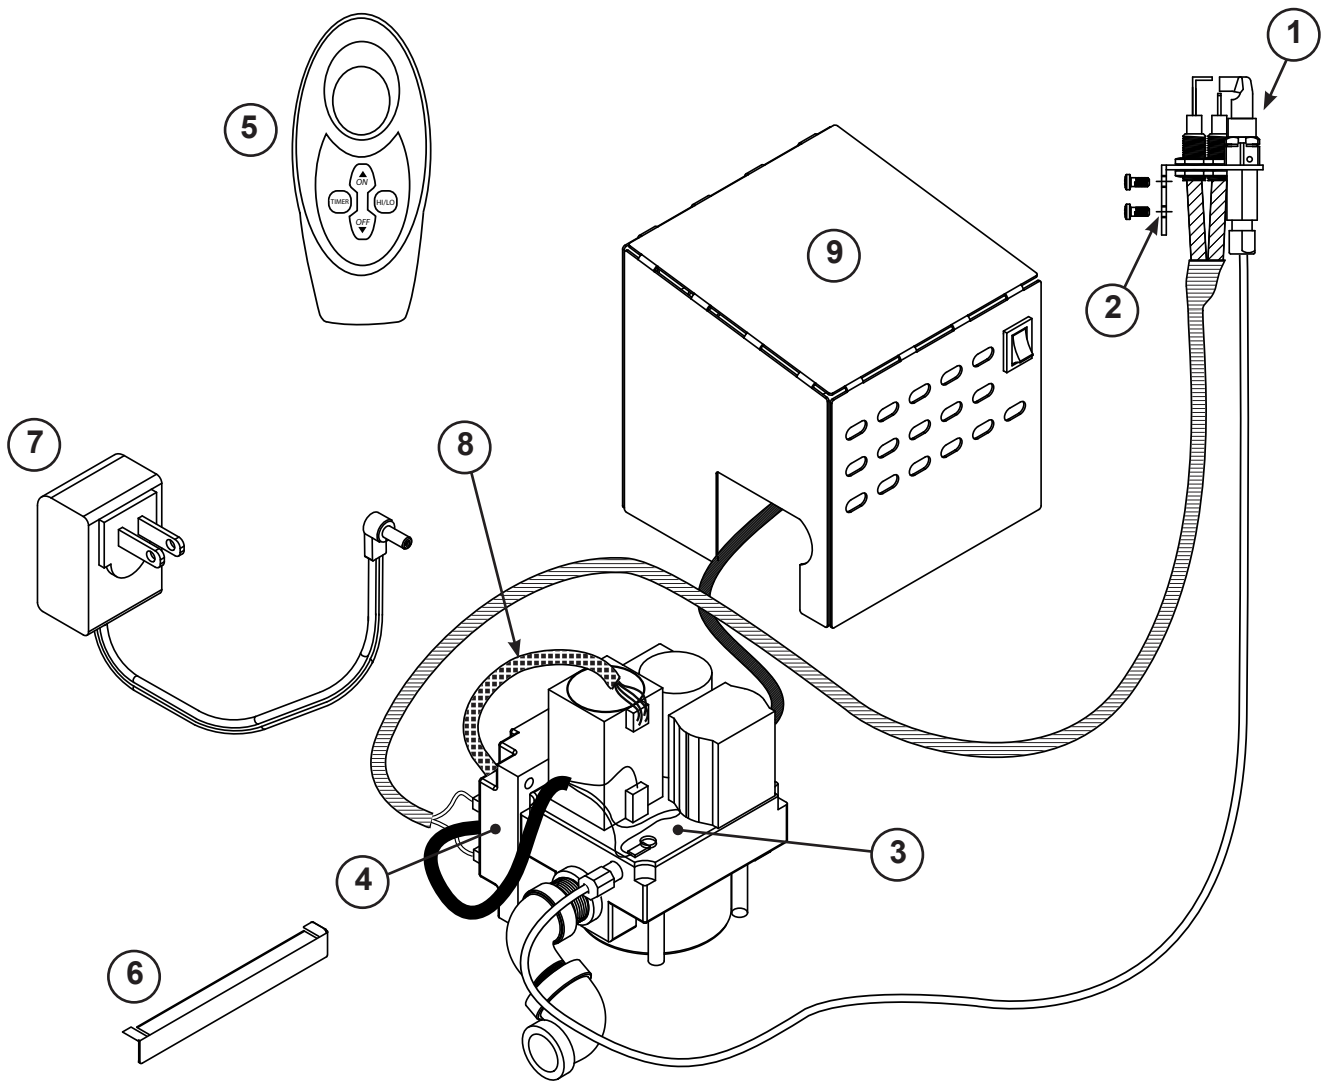

**Note: Photos not to scale**

Item	Description	Part No.	Qty.
1.	Pilot/igniter assembly (natural)	PAC-11	1
or	Pilot/igniter assembly (propane)	PAC-11P	1
2.	Pilot mounting bracket kit	PB-51	1
3.	Control valve w/ wire harness (Nat.)	SV-48	1
or	Control valve w/ wire harness (L.P.)	SV-48P	1
4.	Ignition module pack	IMP-7	1
5.	Remote	AT-12V-1	1
6.	Flame diverter bracket	SH-1	1
7.	Power supply	TR-02	1
8.	Main valve wire harness	WH-04	1
9.	Heat shield	HS-48	1

## INSTALLATION

**This safety pilot system must be installed by a qualified professional service technician. Instructions must be followed carefully when installing to ensure proper performance and full benefit from the burner system and safety pilot system.**

These instructions must be used as a supplement to the instructions supplied with the R.H. Peterson burner system. Follow the burner system instructions and make adjustments as appropriate for the addition of a safety pilot system. Use gas pipe sealing compound that is resistant to all gasses (or Teflon tape) and apply to all male pipe connections. **DO NOT** apply pipe sealing compound to any flare connections. Make sure that all connections are tight.

The valve system is shipped pre-assembled for easy installation onto the burner pan. **Perform installation with care ensuring not to damage the pilot assembly, or the wires that connect the components and heat shield.**

**Note:** Installation is easier when done outside of the fireplace.

### PREPARATION

If the burner that the valve system is to be added to is already installed; remove all decorative media, set aside to be reinstalled later, and disconnect the flex connector and adapter from the burner pan (using the instructions that came with the original burner).

### ELECTRICAL SETUP (if applicable)

**A 120VAC (15 AMP minimum) GFCI GROUNDED 3-wire receptacle** (not included) is required within the vicinity of the fireplace to provide power to the unit. Power supply cord is located on the rear of the control box. Your individual installation may vary. **Observe all local codes.**

1. Wire the receptacle into the vicinity of the fireplace.
  - **Verify proper polarity of the receptacle.**
  - **DO NOT TAMPER WITH THE EXTENSION CORD OR THE UNIT POWER-SUPPLY CORD.**


### INSTALL PILOT MOUNTING BRACKET

**CAUTION:** Use only the pilot assembly pre-assembled with this kit. Never substitute with an existing pilot.

The pilot assembly comes with an L-shaped mounting bracket. Remove the two phillips screws holding the bracket in place, then use them to fasten the bracket to burner pan (short side toward the back of the pan) using the pre-drilled holes in the pan (see Fig. 7-1).

### INSTALL THE VALVE


1. Apply gas pipe sealing compound (or Teflon tape) to the male end of the fuel injector or air mixer on the burner.
2. Install the valve to the fuel injector or air mixer by screwing the pan into the valve (Fig. 7-2). Take care not to damage the attached pilot assembly when rotating the burner pan. Be sure all connections are tight, however do not overtighten to prevent damage to the valve. Ensure the valve is properly installed as shown in Fig 7-3. The burner pan must rest flat on the fireplace floor.

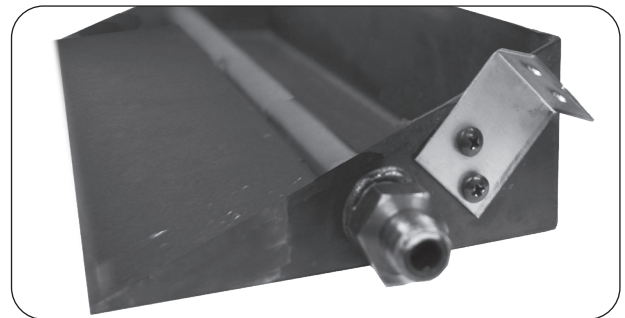


**Fig. 7-1** Install pilot bracket

Install for 2V and 3V valves is the same. 2V SHOWN.

Attach the valve to the air mixer/fuel injector by rotating the burner pan.

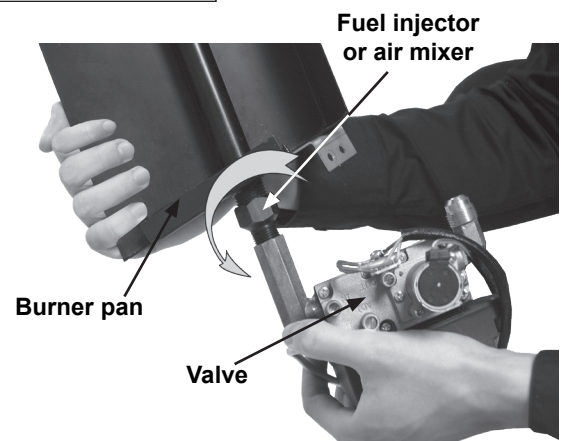

**Fig. 7-2** Install valve

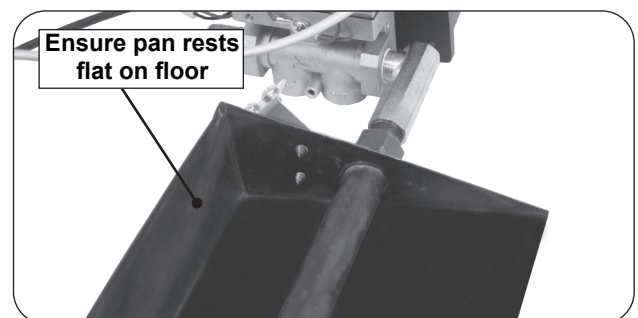

**Fig. 7-3** Proper valve orientation



## INSTALL THE FLAME DIVERTER BRACKET

For installation on G4/G45 burners only. When properly installed onto the burner pan, the flame diverter bracket will promote quicker ignition and protect the safety control system from overheating.

**Note:** You must first install the flame diverter bracket before installing the pilot/igniter assembly .


1. Place the flame diverter bracket over the side edge of the burner pan, near the location the safety control system pilot bracket will be attached. It should be placed **approximately 2-1/4"** from the rear wall of the burner pan (see Fig. 8-1).
2. Tap the bracket lightly with a hammer to secure it in place.

## INSTALL THE PILOT/IGNITER ASSEMBLY TO THE BURNER


**CAUTION:** Do not kink or damage the pilot supply tube, sparking, and sensor probes. Do not unscrew the gas line from the valve.

1. Using the two (2) remaining screws, mount the pilot assembly onto the bracket (from below) and tighten until snug (Fig. 8-2). **Check to be certain the pilot hood and probes are situated above the edge of the pan. Adjust if necessary.**
2. The valve is shipped with the pilot supply tube bent in an ideal manner to prevent damage / unsafe operation, and to allow for proper heat shield placement. Maintain this orientation at all times (reference figures on following page).

**WARNING:** Keep the pilot/igniter assembly clear at all times. Never cover any part of the pilot/igniter assembly.

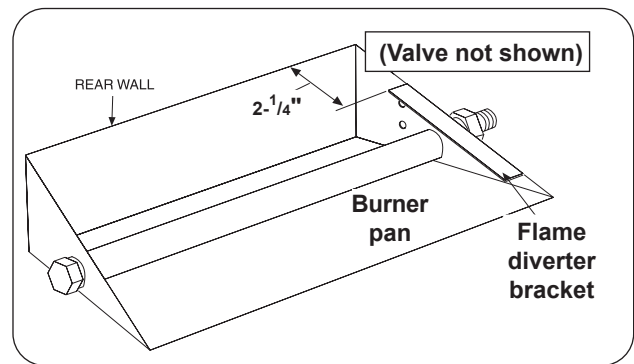

**Fig. 8-1** Install diverter bracket (if applicable)

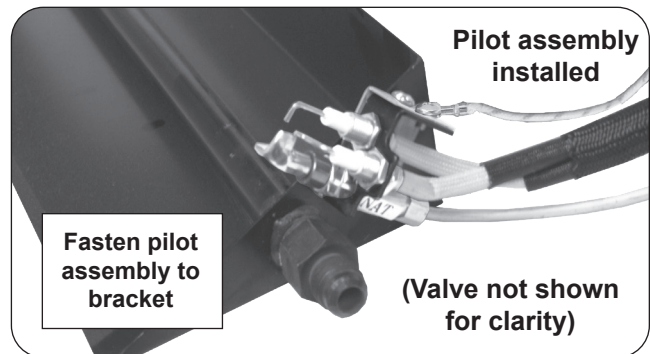

**Fig. 8-2** Install pilot assembly




## CONNECT TO GAS SUPPLY

To connect the valve to the gas supply, the flex connector kit and component parts will be needed, which are included with the burner system. Refer to the PARTS LIST in the instructions supplied with the burner to identify the key parts needed.


1. **MAKE SURE THE FIREPLACE GAS SUPPLY IS TURNED OFF.**
2. Locate the gas-supply stub inside the fireplace and remove the cap, if attached.

**CAUTION:** When removing the cap, make sure the stub does not turn, loosening the connection inside the wall.

3. Discard the small adapter included with burner flex connector kit. Attach one end of the flex connector (included with burner) to the elbow/adapter found on the control valve. Tighten securely. See Fig. 9-1 or Fig. 9-2.
4. Place the burner system in the fireplace. Center the burner in the fireplace.
5. **Be sure gas to the fireplace is off.** Attach the large adapter (included with burner flex connector kit) to the gas-supply stub using a pipe compound resistant to all gasses. Tighten securely. Then attach the open end of the flex connector to the large adapter. Tighten securely.
6. **LEAK TEST:** Turn on the fireplace gas supply, and test at all connections for leaks using the appropriate soapy water solution. If bubbles appear, a leak is present. Turn off the gas and tighten at all connections. Repeat until no leaks are present. If a leak persists, turn off the gas supply and contact the local gas company or dealer. **NEVER USE A FLAME TO CHECK FOR LEAKS.**
7. Follow the instructions supplied with the Peterson burner system for any additional requirements regarding specific burner setup and placement.

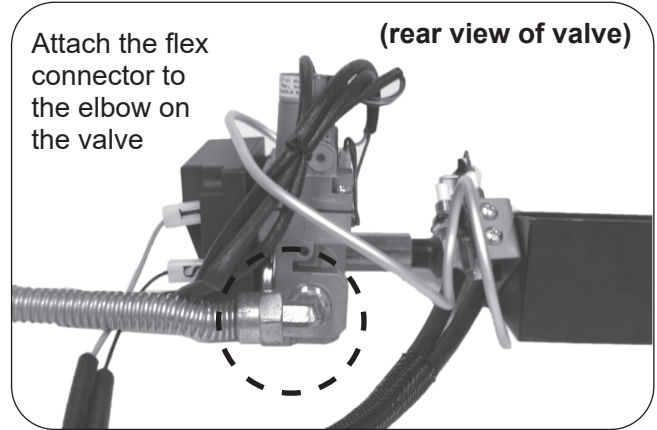

**Fig. 9-1** 2V models: Attach flex to valve

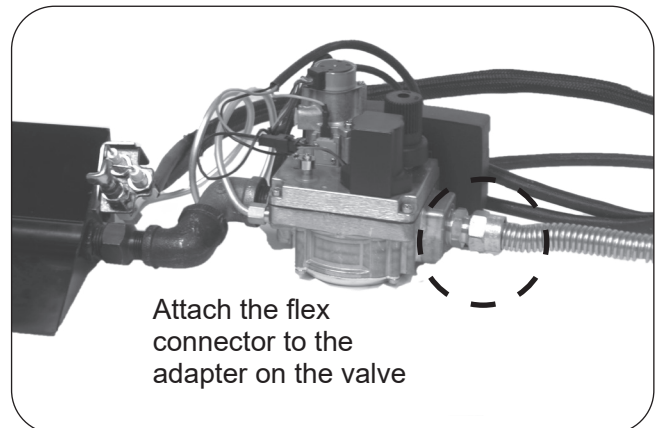

**Fig. 9-2** 3V models: Attach flex to valve

## INSTALLATION (Cont.)





### CHECKING THE CONTROL MODULE

The valve system comes completely assembled with the wiring harness already connected. However, we recommend that you follow the steps below to ensure it has not become detached during shipping **before** connecting to the power supply.

### TO CHECK THE WIRING ASSEMBLY

1. Check that the wiring harness is fitted tightly into the connector on the green ignitor pack attached to the valve (Fig. 10-1, A).
2. Check that the female connectors on the two black wires from the pilot assembly (wires marked "I" and "S") are inserted fully into the male connectors on the ignitor pack (Fig. 10-1, B).
3. Check the connections of the wires to the valve (see Fig. 10-2 C ).

The diagram below (Fig. 10-3 and Fig. 10-4) shows the wiring layout for the complete unit.

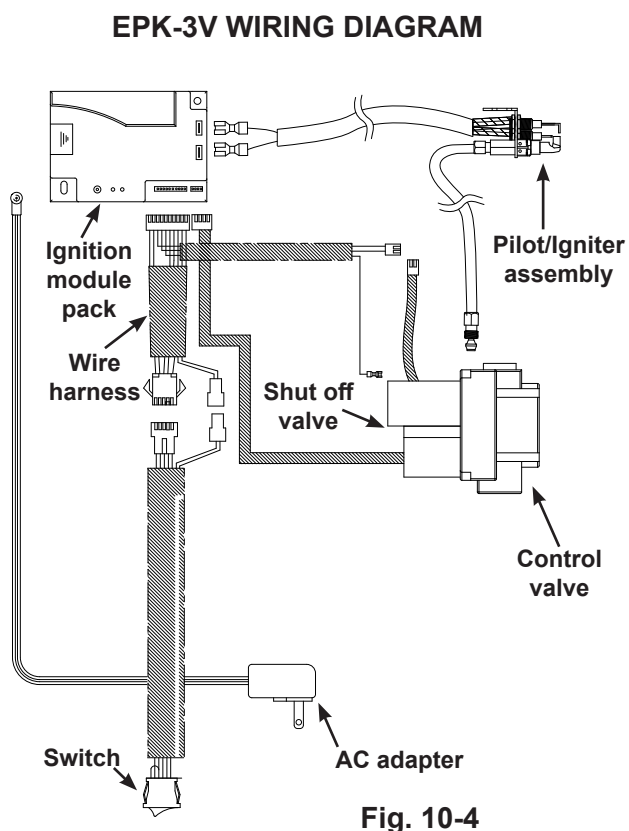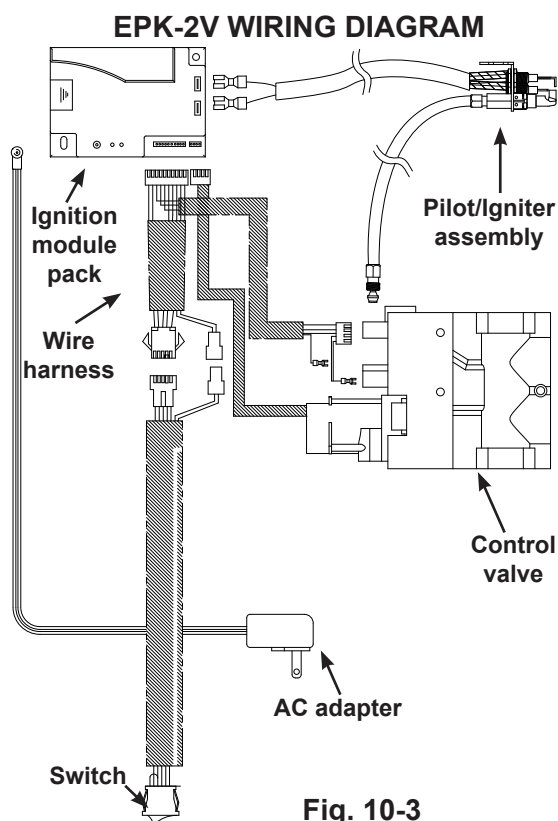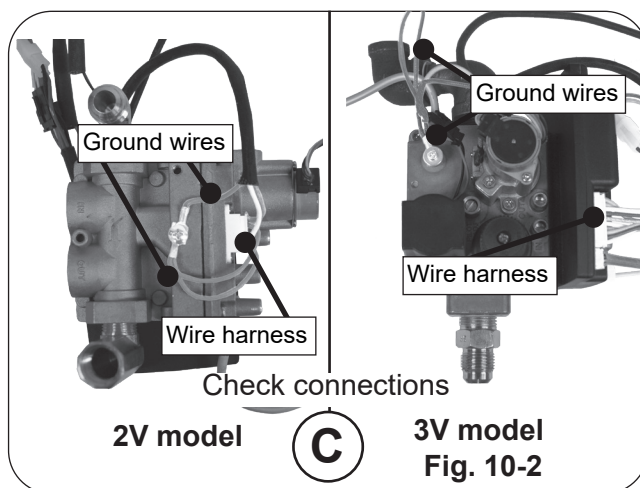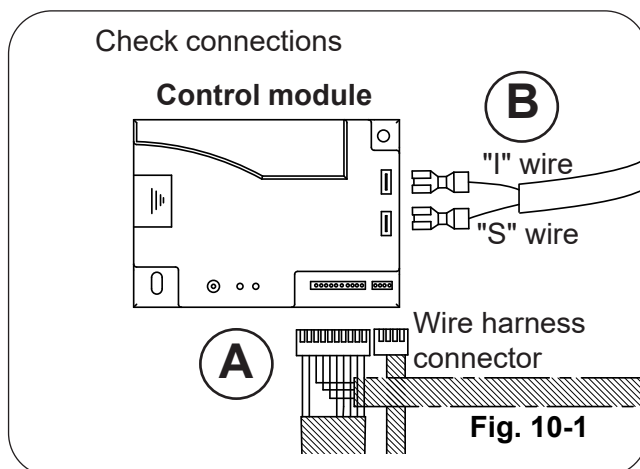

### CONNECT TO A POWER SUPPLY

Locate the supplied power supply and connect it to the ignition module pack. Then route it to the previously wired **120VAC (15 AMP minimum) GFCI GROUNDED 3-wire receptacle** and connect (see Fig. 11-1).

### INSTALL/REPLACE REMOTE TRANSMITTER BATTERIES

**CAUTION:** Ensure the unit is connected to the gas line and has been tested for leaks before you insert batteries.

The remote transmitter requires 3 "AAA" batteries to operate (included). Locate the transmitter, remove the lid (found on rear), and properly insert new batteries as marked. Re-secure the lid. See Fig. 11-2.

### HEAT SHIELD PLACEMENT

**TO PREVENT VALVE DAMAGE AND FAILURE:**  
**IT IS CRITICAL THAT THE HEAT SHIELD BE PLACED CORRECTLY OVER THE VALVE PRIOR TO OPERATION.**

**TO PREVENT OVERHEATING THE VALVE:**

Cover the valve with the heat shield as shown in Fig. 11-3 or Fig. 11-4. It should rest flat above the valve.

The switch wire connecting the heat shield to the ignition module pack is to be routed along the interior right side of the heat shield. Keep all wires inside of the heat shield and/or away from the flame. Keep the area above and below the heat shield clear of decorative media or any other objects at all times.

**Important:** Ensure the pilot supply tube does not interfere with heat shield placement. For 2V models, the tube will come out of the rear and coil back to the pilot. For 3V models, the tube will come out of the left side of the heatshield and coil to the pilot.

**Important:** Keep lava granules/coins, sand/vermiculite, embers/glass, and all foreign objects away from the pilot assembly, valve assembly, and heat shield during media placement and at all times.

### DECORATIVE MEDIA REPLACEMENT

Refer to the burner instructions for proper replacement of decorative media.

**Important:** Keep lava granules/coins, sand/vermiculite, embers/glass, and all foreign objects away from the pilot assembly, valve assembly, and heat shield during media placement and at all times.

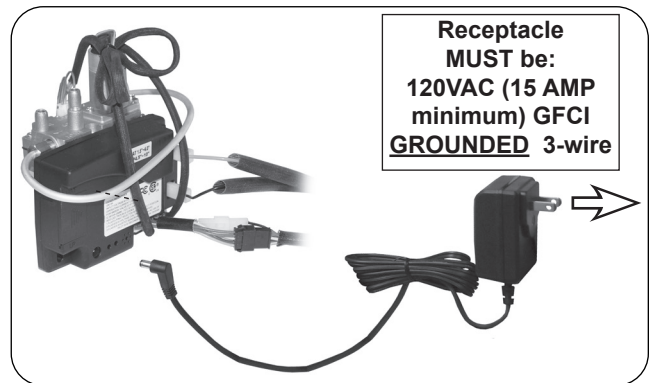


Fig. 11-1 Connect cord to module / power supply

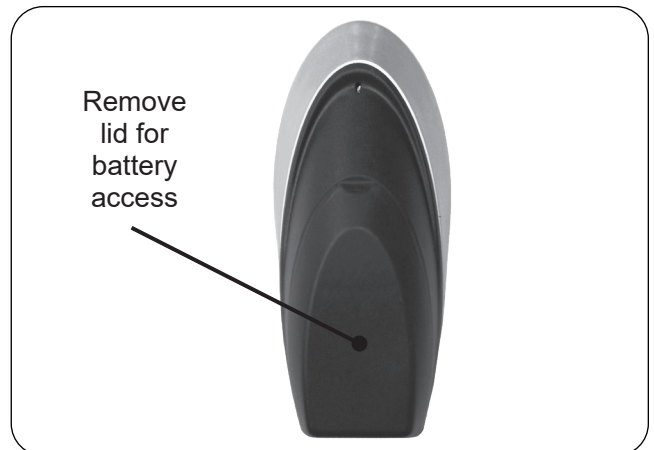


Fig. 11-2 Install/replace transmitter batteries

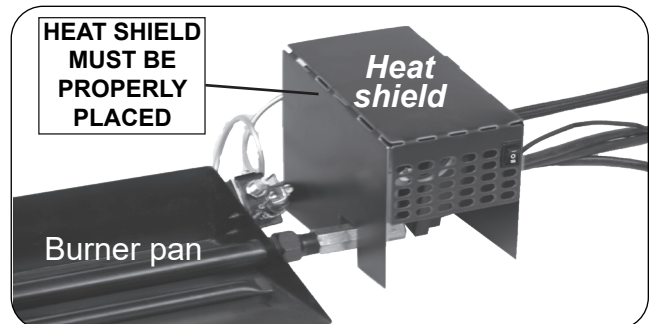


Fig. 11-3 2V models: Place heat shield

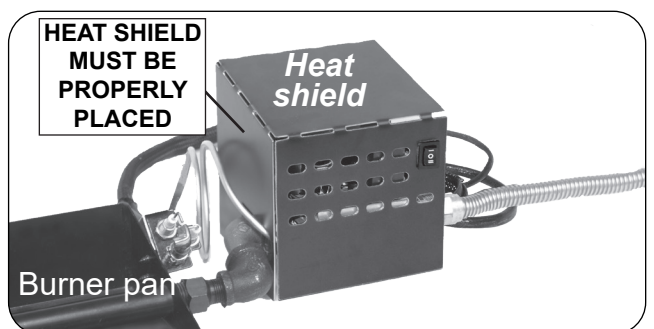


Fig. 11-4 3V models: Place heat shield

# LIGHTING INSTRUCTIONS

## FOR YOUR SAFETY READ BEFORE LIGHTING

**WARNING:** If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- A.** This appliance is equipped with an ignition device that automatically lights the pilot. **DO NOT** attempt to light the pilot by hand.
- B. BEFORE OPERATING**, smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

### WHAT TO DO IF YOU SMELL GAS

- Do not light any appliance.
  - Do not touch any electric switch; do not use any phone in your building.
  - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions. If you cannot reach your gas supplier, call the fire department.
- C.** Use only the supplied switch or the control/remote system components to light the pilot. This valve will not operate if the pilot is not lit and stable.
- D.** Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water. Attempted operation may result in fire or explosion resulting in property damage, personal injury or loss of life.

## REMOTE LIGHTING

**CAUTION:** DO NOT attempt to light the pilot by hand.

**Note:** Step 1 may not be required if previously done during an earlier lighting.

1. Locate the 3-position switch found on the front of the heatshield (see Fig. 12-1). Press the switch down to the **REMOTE** position.
2. Locate the remote transmitter and press the **ON** key (see Fig. 12-2). The ignition sequence will begin.

The remote receiver will emit an audible "beep"; then the igniter will begin to spark. After the pilot lights and is established, the valve will automatically open and the burner will light. Adjust to the desired setting(s) with the remote transmitter. See the REMOTE OPERATING INSTRUCTIONS section for details.

**Note:** The ignition sequence will take approximately 5 seconds.

**WARNING:** If the pilot fails to light within 10 seconds, press the **OFF** button on the remote transmitter or move the switch to the center **OFF** position to turn **OFF** the system. Allow five (5) minutes for any gas in the unit to dissipate, then repeat step 2 above. **IF YOU SMELL GAS, SEE STEP B ABOVE.**

If the pilot fails to light after several tries, turn all control/remote system components to **OFF** and contact a qualified professional service technician.

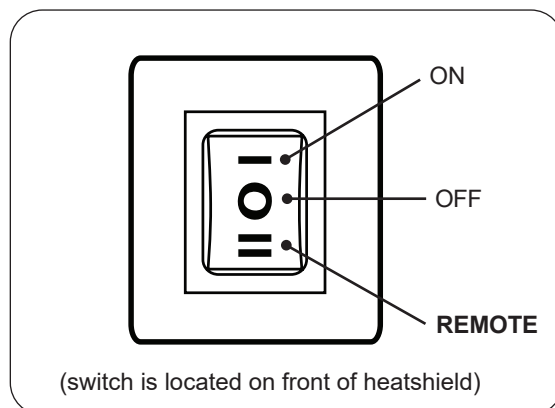


Fig. 12-1 Switch detail

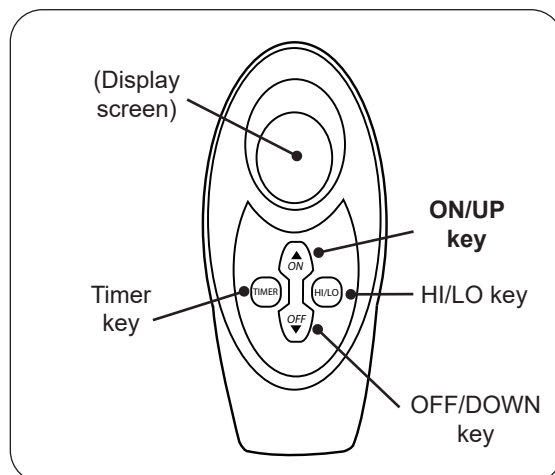


Fig. 12-2 Remote transmitter detail

### MANUAL LIGHTING

**CAUTION:** DO NOT attempt to light the pilot by hand.

1. Locate the 3-position switch found on the front of the heatshield (see Fig. 13-1). Press the switch up to the **ON** position.

The remote receiver will emit an audible "beep"; then the igniter will begin to spark. After the pilot lights and is established, the valve will automatically open and the burner will light.

**Note:** The ignition sequence will take approximately 5 seconds.

**WARNING:** If the pilot fails to light within 10 seconds, turn **OFF** the system. Allow five (5) minutes for any gas in the unit to dissipate, then repeat step 2 above. **IF YOU SMELL GAS, SEE STEP B ABOVE.**

If the pilot fails to light after several tries, turn the system **OFF** and contact a qualified professional service technician.

**Note:** In manual mode, the remote transmitter will not operate the burner system.


### SHUTTING DOWN

- **For a remote shut down**, press the **OFF** button on the remote transmitter.
- **For a manual shutdown (or if your remote is unavailable)**, press the switch found on the front of the heatshield to the center **OFF** position.


### PILOT APPEARANCE

Periodically check the pilot for proper flame pattern. The pilot flame should encircle the generator tip, and is preset at the factory (see Fig. 13-2).

**If the pilot flame burns incorrectly; shut down completely and contact a qualified professional service technician.**

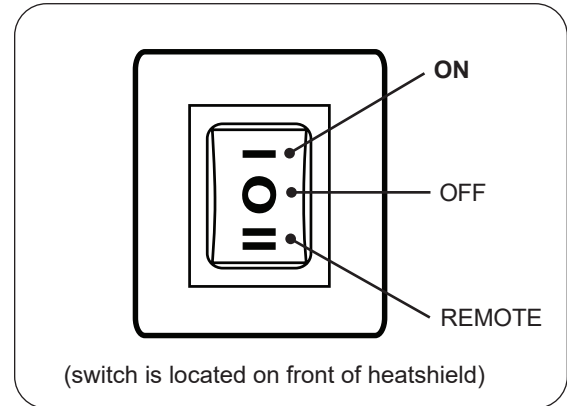

**Fig. 13-1** Switch detail

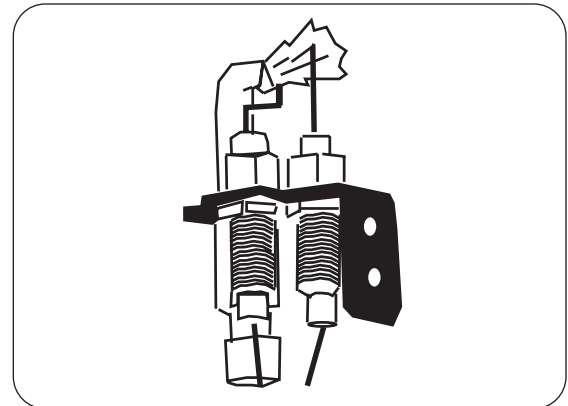

**Fig. 13-2** Proper pilot flame



# REMOTE OPERATING INSTRUCTIONS

## ORIENTATION

Prior to remote transmitter use, light the appliance per the REMOTE LIGHTING section. The remote will only operate the burner system in remote mode. Familiarize yourself with the transmitter keys and display, as illustrated in Fig. 14-1 and Fig. 14-2.

Identify the four transmitter keys:

- **ON/OFF KEYS:** These keys turn the system ON or OFF.
- **HI/LO KEY:** This key, when the system is on, is used to set the desired flame height via the Flame Height mode.
- **TIMER KEY:** This key, when the system is on, is used to set the desired time via the Timer mode.
- **UP/DOWN KEYS:** In Flame Height or Timer mode, the ON/OFF keys become UP/DOWN keys to increase or decrease the Flame Height or Timer amount.

The display will show all active icons on the screen.

## FLAME HEIGHT

Five flame height levels are available. Press the HI/LO key to enter the Flame Height mode. A number 1 - 5 will be displayed at the bottom of the screen. Pressing the Up/Down keys once will increase/decrease the flame height by 1 of 5 increments. See Fig. 14-3.

## TIMER

In Timer Mode, the unit will remain functioning until the set amount of time has expired. Press the Timer key to enter the Timer mode. Pressing the Up/Down keys once in this mode will increase/decrease the set time in increments of 10 minutes. See Fig. 14-4.

To turn off the timer mode press the OFF key. This will turn off the unit.

## TEMPERATURE INDICATOR ( °F or °C)

The temperature can be displayed in °F or °C. When you first install the batteries, the temp indicator at the top of the screen will be flashing. Use the Up/Down keys to switch between °F or °C.

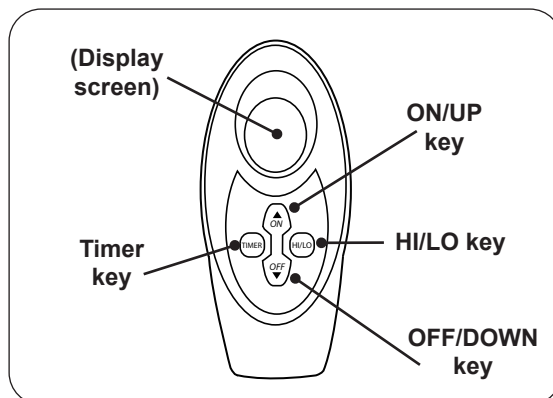


Fig. 14-1 Remote transmitter detail

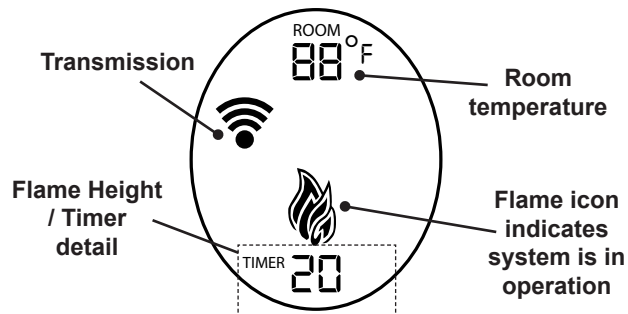


Fig. 14-2 Remote display detail

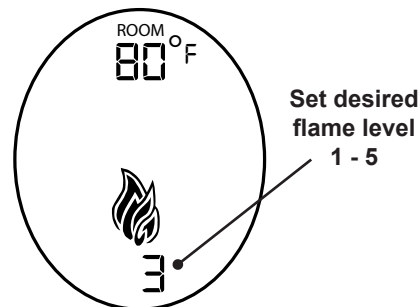


Fig. 14-3 Flame height detail

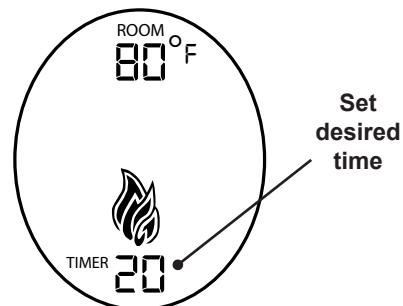


Fig. 14-4 Timer detail


## SYNCING THE REMOTE SYSTEM

### SYNCING THE REMOTE

The ignition module pack has a sync button that is located next to the LED light.

Move the 3-position switch (on the heat shield) down to the **REMOTE** position. Use the tip of a pen or a wire clip to push the sync button and hold. One beep will be heard. While continuing to hold, press and hold the "ON" button on the remote transmitter, until a double beep is heard. Follow the LIGHTING INSTRUCTIONS to test remote functionality.

Refer to the TROUBLE CODES table for a guide if the ignition module pack is flashing the red lights.

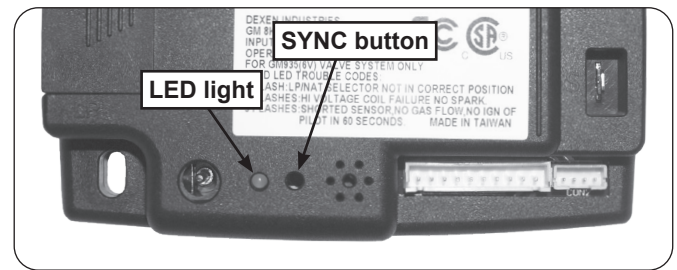

### RED LED TROUBLE CODES

1 Flash	Nat/LP selector not in correct position
2 Flashes	HI voltage coil failure, no spark
3 Flashes	Shorted sensor, no gas flow, no ignition of pilot in 60 seconds



## TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
1. Pilot will not light	<ul style="list-style-type: none"> <li>a. Obstruction in pilot gas supply or pilot gas-supply line is kinked</li> <li>b. Inadequate gas supply</li> <li>c. Air in line</li> <li>d. Gas is shut off on control valve (3V models only)</li> </ul>	<ul style="list-style-type: none"> <li>a. Clear out obstruction. Replace pilot gas-supply line if kinked</li> <li>b. Have gas pressure checked by installer or gas supplier</li> <li>c. Air should clear; attempt to relight</li> <li>d. Turn on valve (3V models only)</li> </ul>
2. No spark at pilot	<ul style="list-style-type: none"> <li>a. Loose wires</li> <li>b. Appliance not receiving power</li> <li>c. Faulty switch or remote (if equipped)</li> </ul>	<ul style="list-style-type: none"> <li>a. Check all wires are securely in place</li> <li>b. Check remote batteries / power supply</li> <li>c. Replace the switch or remote system as appropriate</li> </ul>
3. Pilot lights, but main burner will not	<ul style="list-style-type: none"> <li>a. Loose or broken connector wires</li> <li>b. Defective valve</li> </ul>	<ul style="list-style-type: none"> <li>a. Check and replace if necessary</li> <li>b. Replace valve</li> </ul>
4. Burner system not burning properly	<ul style="list-style-type: none"> <li>a. Low flame/uneven flame</li> </ul>	<ul style="list-style-type: none"> <li>a. Check for low gas pressure; should have operating pressures of 7" w.c. for natural gas, 11" w.c. for propane at manifold</li> <li>b. Burner should be filled completely with sand or vermiculite</li> </ul>
5. Burner system shuts down during operation	<ul style="list-style-type: none"> <li>a. Glass doors closed, causing excessive heat buildup</li> <li>b. Pilot electrode not properly set to pilot location</li> <li>c. Heat shield not in place</li> </ul>	<ul style="list-style-type: none"> <li>a. Open glass doors</li> <li>b. See INSTALL THE PILOT ASSEMBLY TO THE BURNER section</li> <li>c. Place heat shield over valve. Be sure the solid black face of the shield is between the valve and the burner</li> </ul>
6. Intermittent ignitor spark during use (main burner has been burning for well over a minute).	<ul style="list-style-type: none"> <li>a. Embers or sand covering pilot assembly</li> </ul>	<ul style="list-style-type: none"> <li>a. Clear all foreign material from around the pilot assembly</li> </ul>
7. Remote control not functioning	<ul style="list-style-type: none"> <li>a. Appliance not receiving power</li> <li>b. No gas flow to the valve</li> <li>c. Remote too far from receiver</li> <li>d. Spark ignition interfering with remote signal</li> </ul>	<ul style="list-style-type: none"> <li>a. Check remote batteries / power supply</li> <li>b. Check gas supply to valve</li> <li>c. Move remote closer to receiver</li> <li>d. Move remote closer to receiver</li> </ul>

Periodically inspect the pilot assembly and valve controls and maintain them free of obstruction or debris. If the pilot flame is not blue with possibly yellow tips and does not impinge on the electrodes or if the pilot does not stay lit, contact a qualified professional service technician to service the pilot system.


## Detail A

### Electrode (A)

When adjusting the spark electrode (if necessary), NEVER adjust the electrode by bending the wire. ALWAYS adjust the electrode by loosening the retainer nut(s), then adjust accordingly.

The minimum gap between the spark electrode/heat sensor and the pilot flame hood is  $\frac{1}{8}$ ". The maximum is  $\frac{5}{32}$ ".

If the electrode ceramic is loose in the threaded barrel, the pilot assembly must be replaced.

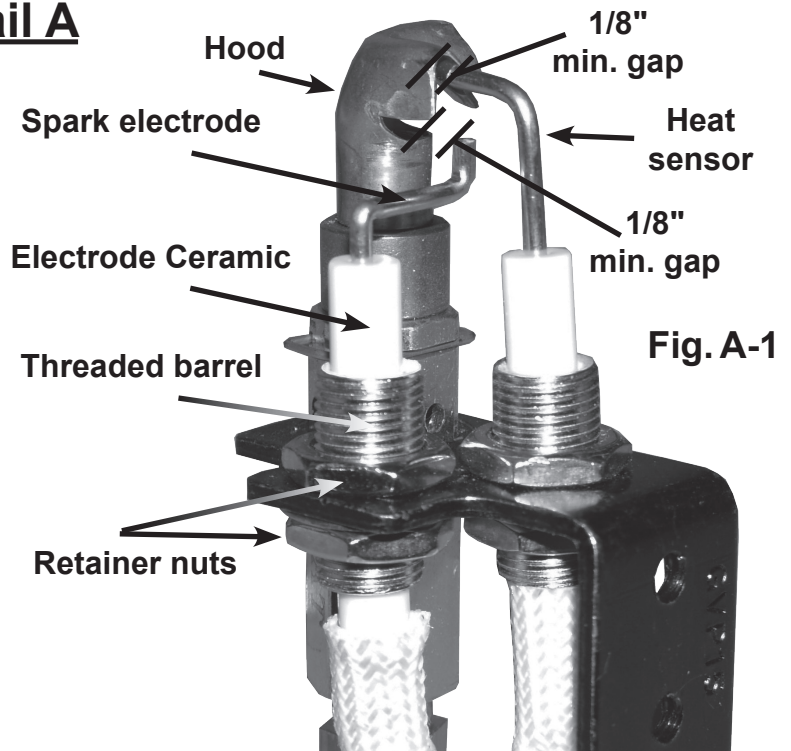

## Detail B

### Terminal Connections (B)

All of the connections on the control module must be properly attached. If the spade terminals are loose, inspect to ensure they correctly appear as detailed below. Use needle nose pliers to clamp down on the center/sides of the terminals if needed (to provide a tight fit.) See Fig B-3 below.


#### Spade Terminal Detail



Ensure that spade terminals (S and I) are attached securely

Ensure that multi-wire connector is properly engaged

Control Module (DESIGN MAY VARY) (Fig. B-2)

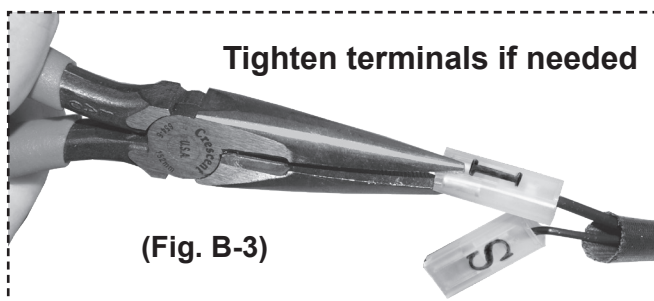

## Detail C

(Fig. C-1)

DO NOT bundle tightly together as shown

### Assembly Wires (C)

DO NOT bundle the excess pilot assembly wires tightly together as this can reduce the intensity of the spark.

# WARRANTY

## PETERSON VENTED DECORATIVE GAS APPLIANCE LIMITED WARRANTY

Robert H. Peterson Co. ("RHP") warrants your Real Fyre vented decorative gas appliance to be free from defects in material and workmanship. Peterson vented refractory gas logs are warranted for **as long as the original purchaser owns them (lifetime) when used indoors and for THREE (3) YEARS when used outdoors.**

Peterson vented fiber-ceramic blended gas logs are warranted for **FIVE (5) YEARS when used indoors and for THREE (3) YEARS when used outdoors.**

Peterson **indoor** vented gas log burners and stainless steel burners (excluding controls) are warranted for **TEN (10) YEARS.**

Peterson **outdoor** vented stainless steel burners (excluding controls) are warranted for **FIVE (5) YEARS.**

The **SPK-26** is warranted for **THREE (3) YEARS** and **APK-17** (including -17 valve) is warranted for **TWO (2) YEARS.**

All other valves, pilots, and controls are warranted for **ONE (1) YEAR** (excluding batteries).

Peterson glass, gems, and nuggets are warranted for **TEN (10) YEARS.**

### A COPY OF YOUR SALES SLIP FOR PROOF OF PURCHASE IS REQUIRED

This warranty applies to the original purchaser for products which are installed in the United States or Canada and which are operated and maintained as intended for single family residential usage. This warranty is valid only with proof of purchase, commences on the date of purchase, and terminates (both as to original and any replacement products) on the anniversary date of the original purchase of the product per the above schedules.

This warranty covers defects in material and workmanship. This warranty **does not** cover parts which become defective as a result of negligence, misuse, use not in compliance with the Installation and Owner's Manual, accidental damage, improper handling, improper storage, improper installation, **lack of required routine maintenance** (as specified in the Installation and Owner's Manual), electrical damage, local gas impurities or failure to protect against combustible materials. Product must be installed (and gas must be connected) as specified in the Installation and Owner's Manual by a **qualified professional installer**. This warranty **does not** apply to rust, corrosion, oxidation, or discoloration unless the affected part becomes inoperable. Peterson products including valves, pilots and controls, are designed and certified to be used as a system. Modifications to products which are not specifically authorized will void this warranty and could render the product to be unsafe. Burners, valves, parts, accessories, remotes, etc. used with this product must be Peterson products or this warranty is void.

Warranted items will be repaired or replaced at Peterson's sole discretion. This warranty **does not** cover labor or labor related charges, except as provided by separate specific written programs from the Peterson Co. All repair work must be performed by a qualified professional service person and requires prior approval of Peterson.

Peterson may require the defective product or part to be returned to the factory to determine the cause of failure. Peterson will pay freight charges if the product or part is determined to be defective. This warranty does not cover breakage in shipment from our independent distributor to its customer if the damage is determined to have occurred during that shipment.

This warranty specifically excludes liability for **indirect, incidental**, or consequential damages. Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion may not apply to you. This warranty gives you specified legal rights, and you may have other rights that vary from state to state or province.

For additional information regarding this warranty, or to place a warranty claim, contact the R.H. Peterson dealer where the product was purchased.

When contacting your Peterson dealer or the R.H. Peterson Co., please provide the following information:

- Your name, address, telephone number, e-mail
- Sales receipt showing where purchased and date purchased
- Model number, serial number of product, date code
- Relevant information: installer, additions, repairs, when defect was first noted

**TO REGISTER YOUR PRODUCT ONLINE GO TO: [WWW.RHPETERSON.COM](http://WWW.RHPETERSON.COM),  
AND CLICK ON PRODUCT REGISTRATION. THANK YOU FOR YOUR PURCHASE.**

<b>Quality Check</b>		<b>Date:</b> _____	
<b>Leak Test:</b> _____	<b>Burn Test:</b> _____	<b>Gas Type:</b> _____	<b>Nat. / L.P.</b>
<b>Inspector:</b> _____			